

WARNING: Do Not Operate Before Reading Manual

Mechanical Vacuum Boosters OPERATOR'S MANUAL

Models

150	540	1200	2700
240	720	1600	
400	850	2000	

Mechanical Splash Lube
Slinger Splash Lube
C-Flange



Disclaimer Statement:

All information, illustrations and specifications in this manual are based on the latest information available at the time of publishing. The illustrations used in this manual are intended as representative reference views only. Products are under a continuous improvement policy. Thus, information, illustrations and/or specifications to explain and or exemplify a product, service or maintenance improvement may be changed at any time without notice.

Rights Reserved Statement:

No part of this publication may be reproduced or used in any form by any means - graphic, electronic or mechanical, including photocopying, recording, taping or information storage and retrieval systems - without the written permission of Kinney®.

Product information and specifications subject to change.

Table of Contents

- Introduction 1**
 - Applicable Documentation 1
 - Scope of Manual..... 1
- Conventions and Data Plate 2**
 - Graphic Conventions Used in this Manual..... 2
 - Data Plate..... 3
- Lifting 5**
- Description 6**
 - Flow by Direction..... 7
 - Specifications..... 8
- Installation 10**
 - General 10
 - Booster Air Intake 11
 - Foundation..... 12
 - Location..... 12
 - Soft Foot 12
 - Safety 13
 - Lubrication 14
 - Filling Procedure 14
 - Frequently Asked Questions Regarding Lubrication 16
 - Hazards Associated With Breakdown or Ignition of Lubrication 16

Piping Connections.....	16
Hazards Associated With Hazardous Process Fluids.....	17
Blockage or Restriction	17
Water-Cooling Instructions.....	17
Cooling Water Connections.....	18
Cooling Water Specifications	18
Motor Drives	18
Direct Coupled	18
V-Belts	19
Setting V-Belt Tension.....	19
V-Belt Troubleshooting	20
Motor and Electrical Connections.....	21
Operation	22
General	22
Start-Up Checklist.....	23
Starting.....	24
Operating	24
Stopping.....	24
Recommended Shutdown Procedure to Minimize Risk of Freezing or Corrosion	25
Maintenance	26
General	26
Regular Maintenance.....	27
Spare Parts	27
Factory Service and Repair	28
Long-Term Storage	28
Troubleshooting.....	29
Assembly Clearances.....	32
Torque Chart.....	32

Recommended Lubricants..... 33

 Recommended Lubricants for Blowers and
 Vacuum Boosters 33

Parts List..... 35

Assembly Drawings..... 44

 Models 150 to 400 – Cutaway View 44

 Models 150 to 400 – Dimensions..... 45

 Models 150 to 400 – C-flange – Cutaway View..... 46

 Models 150 to 400 – C-flange – Dimensions 47

 Models 540 to 720 – Cutaway View 48

 Models 540 to 720– Dimensions..... 49

 Models 540 to 720 – C-flange – Cutaway View..... 50

 Models 540 to 720 – C-flange – Dimensions 51

 Models 850 to 2700 – Cutaway View 52

 Models 850 to 2700 – Dimensions..... 53

 Models 850 to 2700 – C-flange – Cutaway View..... 54

 Models 850 to 2700 – C-flange – Dimensions 55

Warranty – Vacuum Products 56

Operating Data Form / Product Registration..... 57

INTRODUCTION

CONGRATULATIONS on the purchase of a new **Mechanical Vacuum Booster** from Kinney. Please examine the booster for shipping damage, and if any damage is found, report it immediately to the carrier. If the booster is to be installed at a later date, make sure it is stored in a clean, dry location and rotated regularly. Make sure covers are kept on all openings. If the booster is stored outdoors, be sure to protect it from weather and corrosion.

Mechanical Vacuum Boosters are built to exacting standards and, if properly installed and maintained, will provide many years of reliable service. Kinney urges you to take time to read and follow every step of these instructions when installing and maintaining your booster. Tuthill has tried to make these instructions as straightforward as possible. Kinney realizes getting any new piece of equipment up and running in as little time as possible is imperative to production.

NOTE: Record the booster model and serial numbers of the machine in the OPERATING DATA form on the inside back cover of this manual. Use this identification on any replacement part orders, or if service or application assistance is required.

This manual covers the installation, operation, and maintenance of the Kinney mechanical vacuum boosters.

APPLICABLE DOCUMENTATION

The applicable documents associated with this manual are:

- 2006/42/CE – Machinery Directive
- EN 1012-2:1996 – Compressors and vacuum pumps – Safety Requirements – Part 1: Compressors

SCOPE OF MANUAL

The scope of this manual is for the bare shaft booster.

02

CONVENTIONS AND DATA PLATE

GRAPHIC CONVENTIONS USED IN THIS MANUAL

This manual is the result of a risk assessment according to the applicable documents referenced in **“Applicable Documentation” on page 1.**

The following hazard levels are referenced within this manual:



DANGER

Indicates a hazardous situation that, if not avoided, will result in death or serious injury.



WARNING

Indicates a hazardous situation that, if not avoided, could result in death or serious injury.



CAUTION

Indicates a hazardous situation that, if not avoided, could result in minor or moderate injury.

NOTICE

Indicates a situation that can cause damage to the engine, personal property, and/or the environment or cause the equipment to operate improperly.

NOTE: Indicates a procedure, practice, or condition that should be followed in order for the equipment to function in the manner intended.



CAUTION

Read manual before operation or bodily harm may result. Attention should be given to the safety related sections of this manual.

DATA PLATE






MODEL NUMBER	SERIAL NUMBER	MAWP	YEAR
KINNEY® 4840 West Kearney Street Springfield, Missouri USA 65803		MAX RPM	
READ INSTRUCTION MANUAL BEFORE OPERATION OR BODILY HARM MAY RESULT			
WARNING  Keep body & clothing away from machine openings.	WARNING  Do not operate without guards in place.	CAUTION  Hearing protection required.	CAUTION  Do not touch hot surfaces.
(800) 825-6937			Made in the USA

Figure 2-1 – General Operation and Symbols on Data Plate

The following information is contained on the data plate:


WARNING


Keep body & clothing away from machine.


During operation, keep body and clothing away from inlet and outlet of the booster.

WARNING


Do not operate without guards in place.

CAUTION


Hearing protection is required while the booster is in operation. Noise levels may reach as high as 81 dBA.

CAUTION


Do not touch hot surfaces.

The upper limit of the booster operation is 375°F (190°C). Do not touch the booster while it is in operation and assure booster is cool when not in operation.

MODEL NUMBER:	The specific model of the booster
SERIAL NUMBER:	Unique to each booster
YEAR:	Year of manufacture
RPM:	The maximum RPM at which the booster can be operated

**WARNING**

The booster must be handled using an appropriate device such as a fork truck or appropriate lifting device. **See Table 4-1 on page 8** for approximate weights. Care should be taken to assure booster does not over-turn during handling and installation.

04

DESCRIPTION

NOTICE

Refer to specific data sheets for flow capacities and vacuum capacities.

NOTE: Refer to diagrams in this manual for proper rotation and orientation in inlet and discharge.

Kinney models 150 to 400, 540 to 720, and 850 to 2700 mechanical vacuum boosters are positive displacement type boosters, whose pumping capacity is determined by size, operating speed, and differential pressure conditions. Vacuum boosters employ rotors rotating in opposite directions within a housing closed at the ends by end plates.

The inlet to the discharge is sealed with operating clearances that are very small. Internal lubrication is not needed, as there is no moving contact.

Clearances between the rotors during rotation are maintained by a pair of accurately machined helical timing gears, mounted on the two shafts extended outside the air chamber. The intermeshing rotary lobes are designed to rotate and trap air or gas between each rotor and the housing. As the rotor lobes rotate past the edge of the suction port, the trapped air or gas is essentially at suction pressure and temperature. Since the booster is a constant volume device, the trapped air remains at suction pressure until the leading rotor lobe opens into the discharge port. The close clearances between the rotors inhibit back slippage of the trapped volume from between the rotors and the trapped volume is forced into the discharge piping. Compression occurs not internal to the booster, but by the amount

of restriction, either downstream of the booster discharge port, or upstream of the booster inlet port.

Figure 4-1 illustrates the air movement within the machine. In addition, the machine can operate in either direction.

Never attempt to control capacity by means of a throttle valve in the intake or discharge piping. This will increase the power load on the drive system, which will increase operating temperatures, and can overload and/or seriously damage the booster. Likewise, if the possibility exists that flow to the booster inlet may be cut off during normal operation of a process, install an adequate vacuum relief valve. A pressure-type relief valve in the discharge line near the booster is also strongly recommended for protection against cutoff or blocking in this line. Use check valves on each booster when more than one booster is connected to a discharge line.

Vacuum boosters must be protected by cut-in switches or with bypass valving to limit differential pressure across the booster.

When a belt drive is used, it is possible to adjust booster speed to obtain desired capacity by changing the diameter of one or both sheaves, or by using a vari-speed motor pulley. In a direct coupled arrangement, a variable-speed motor or transmission is required. Gas boosters can use bypasses, but some applications may require additional cooling. If there is a large volume of high-pressure air or gas downstream of the booster, a check valve in the piping downstream of the booster will protect the booster from overspeeding in a backward direction upon shutdown.

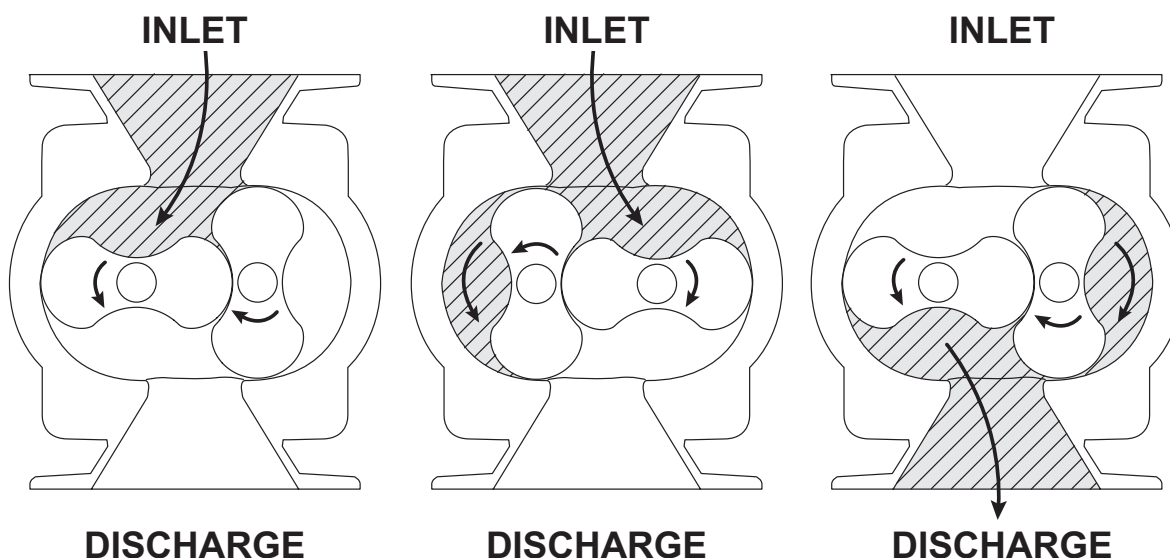


Figure 4-1 – General Operation Principle

FLOW BY DIRECTION

⚠ WARNING

Refer to diagrams in this manual for proper rotation and orientation in inlet and discharge.

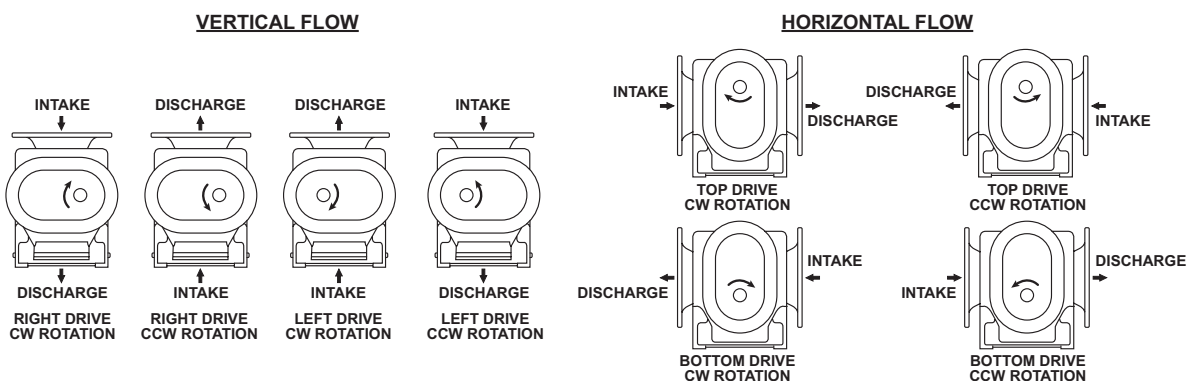


Figure 4-2 – Flow Direction by Rotation

SPECIFICATIONS

MODEL	APPROXIMATE OIL CAPACITY		PORT SIZE	MAXIMUM RPM	APPROXIMATE WEIGHT	
	VERTICAL	HORIZONTAL			VERTICAL	HORIZONTAL
150	1 qt (0.95 L)	0.5 qt (0.47 L)	2 in. (50 mm)	3,600	145 lb (65 kg)	130 lb (59 kg)
240			3 in. (80 mm)		160 lb (73 kg)	145 lb (66 kg)
400			4 in. (100 mm)		195 lb (88 kg)	180 lb (82 kg)
540	1.5 qt (1.42 L)	1 qt (0.95 L)	4 in. (100 mm)	3,600	260 lb (118 kg)	240 lb (109 kg)
720			4 in. (100 mm)		300 lb (136 kg)	280 lb (127 kg)
850	4 qt (3.79 L)	2.5 qt (2.37 L)	6 in. (150 mm)	3,600	450 lb (204 kg)	430 lb (195 kg)
1200			6 in. (150 mm)		520 lb (236 kg)	490 lb (222 kg)
1600			6 in. (150 mm)		580 lb (263 kg)	540 lb (245 kg)
2000			8 in. (200 mm)		685 lb (310 kg)	645 lb (293 kg)
2700			10 in. (250 mm)		790 lb (358 kg)	750 lb (340 kg)

Maximum discharge temperature is 375°F (190°C). Maximum temperature is based on a 70°F (21°C) inlet temperature. For inlet temperatures below 70°F (21°C), maximum allowable temperature rise across the vacuum booster should also never exceed 305°F (170°C).

Table 4-1 – Specifications

To permit continued satisfactory performance, a vacuum booster must be operated within certain approved limiting conditions. The manufacturer's warranty is, of course, also contingent on such operation.

Maximum limits for pressure, temperature, and speed are specified in **"Table 4-1 – Specifications" on page 8** for various booster sizes when operated under the standard atmospheric conditions. Do not exceed any of these limits.

EXAMPLE: Operation of a vacuum booster seldom results in pressure differentials large enough to strain the booster drive train (bearings, gears, and seals). Typically in vacuum boosting, the maximum allowable temperature limit (the limit is a function of the temperature rise as well as the inlet temperature) for any particular booster may occur well before the maximum speed or allowable power rating is reached. Temperature rise then becomes the limiting condition. In other words, the operating limit is always to be determined by the maximum rating reached first, and it can be any one of the three: temperature, speed, or horsepower.

NOTICE

*Specially ordered boosters with nonstandard construction, or with rotor end clearances greater than shown within the “**Assembly Clearances**” on page 31, will not have the operating limits specified here. Contact your Kinney sales representative for specific information.*

NOTICE

Pay special attention when a vacuum booster has a higher than standard ambient suction temperature. Special recommendations for operating parameters and/or additional cooling may be recommended. Consult the factory or local representative for appropriate information.

Deep vacuum requires instrumentation much more sensitive than standard thermometers and mercury-type pressure or vacuum gauges. At operation pressures less than 100 Torr (mmHg), use low-deadband cut-in switches and low-mass thermocouples, positioned so the sensor is connected to the inlet and discharge connections of the vacuum booster. NPT connections are provided at each of the inlet and discharge ports for this purpose. Standard temperature switches, because of their higher mass, do not have reaction times fast enough to adequately protect the vacuum booster. Likewise, standard vacuum switches are not recommended for cut-in switches, as vacuum boosting typically requires a very accurate cut-in point. A tachometer will enable periodic checks of operating speed.

05

INSTALLATION

GENERAL

DANGER

The booster is not intended to be used with explosive products or in explosive environments. The blower is not intended to be used in applications that include hazardous and toxic gases. Consult the factory for support.

DANGER

It is the responsibility of the installer to assure that proper guarding is in place and compliant with all applicable regulatory requirements.

WARNING



The bare shaft booster can generate excessive noise. Methods to reduce the noise levels by installing inlet and outlet silencers will be required. Even with inlet and outlet silencers, hearing protection will be required.

WARNING

Customers are warned to provide adequate protection, warning and safety equipment necessary to protect personnel against hazards in the installation and operation of this equipment in the system or facility.

WARNING

Table 4-1 on page 8 states the maximum operating speed in RPM (rotations per minute) and maximum temperature. Do not exceed these limits. The installation of the booster shall take these critical operating parameters into account and adequate control features implemented.

WARNING

Upon completion of the installation, and before applying power, rotate the drive shaft by hand. It must move freely. If it does not, look for uneven mounting, piping strain, excessive belt tension or coupling misalignment or any other cause of binding. If booster is removed and still does not move freely, check inside the booster housing for foreign material.

NOTICE

Remove the protective covers from the shaft and inspect for damage.

Carefully check to ensure that no transit damage has been sustained. If damage has occurred from shipment, file a claim with the carrier immediately. Preserve the shipping container for inspection by the carrier.

NOTICE

If booster sustains damage while being shipped to your facility, do not return it to the factory without first obtaining shipping instructions from Kinney.

Do not remove protective covers and plugs until the connections are complete. Mount the booster on a flat, level surface. Use a baseplate that is rigid, solidly supported, and structurally sound. Shim under the legs where necessary so that each leg of the booster supports an equal share of the booster weight. This is necessary to prevent eventual twisting of the booster. Make sure the feet rest evenly on the mounting surface before fastening down. Twisting or cramping the booster during mounting will cause rotor contact and binding during operation, resulting in a condition called "soft foot". **See Soft Foot on page 12** for further details and preventative measures.

A booster that is factory-mounted on a base should not require the above adjustments. However, since the assembly can become twisted in shipping or installation, check for soft foot after installing the base. Shims may be needed for alignment. Loosen the foot hold-down screws to check foot contact with the mounting surface. Mount the base on a solid foundation or heavy flooring, using shims as necessary at bolting points to prevent warping the assembly.

Transmission of small operating vibrations to a support structure may be objectionable in some applications. Use of vibration isolators or vibration absorbing materials can be effective in overcoming this transmission. To avoid causing distortion, apply the treatment under the common motor/booster base or mounting plate rather than directly under the feet alone.

Make sure piping is accurately squared with the booster and supported independently. Stress imparted from incorrectly aligned piping or mounting will create problems with bearing and seal life, possibly leading to internal contact. The booster should sit stress-free and evenly on its supporting surface. Take care to evenly tighten the mounting bolts to avoid imparting undue stress into the booster. Stress can be checked in a free state with feeler stock or verified on a previously installed booster with the aid of a dial indicator. Spring or gap should be less than 0.002 in. (0.05 mm).

A booster may be driven by direct-coupling to the driver or by V-belt drive for the purpose of obtaining other speeds within the approved range. **See Motor Drives on page 18** for more information.

Boosters from Kinney are internally and externally treated after factory assembly and testing to protect against rusting in normal atmospheric conditions prior to installation. The maximum period of internal protection is considered to be up to 6 months under average conditions, provided closing plugs and seals are not removed. Protection against chemical or salt-water atmosphere is not provided. Avoid opening the booster until ready to begin installation, as protection will be quickly lost due to evaporation. For recommended preparations for long term storage (longer than 6 months), **see Long-Term Storage on page 28**.

Booster Air Intake

To minimize maintenance, supply the booster with the cleanest air possible. The air must not contain any flammable or toxic gases, as the booster will concentrate these gases. This could result in damage to the booster and surrounding property and lead to personal injury or death. Do not block or restrict the opening of the booster, as the motor and booster could overheat and fail.

Do not use boosters on explosive or hazardous gases. Do not exceed the limits described in **Table 4-1 – Specifications on page 8** on pressure differential, running speed, and discharge temperature.

If it is necessary to take air from a remote source, such as in a vacuum application, make sure diameter of the piping is at least equal to the diameter of the booster inlet. For distances greater than 20 ft (6 m), enlarge the pipe diameter to reduce inlet restriction. Excessive restriction will reduce the efficiency of the booster and elevate its discharge temperature. The piping used should also be corrosion resistant and free of scale and dirt. Keep the inlet covered to keep out foreign objects and rain. Vacuum kits are available.

Foundation

The booster does not need a special foundation. However, it does require a solid, level floor and adequate frame support. Bolt the booster to the floor and seal any cracks.

Location

Install the booster in a room or outdoor area that supplies adequate space and lighting for routine maintenance. Make sure that indoor installation areas are well ventilated and kept as cool as possible, because operating the booster at elevated temperatures can result in nuisance overload or temperature shutdowns. An unprotected outdoor installation is satisfactory only when correct lubrication for the expected temperatures is provided. **See Assembly Clearances on page 4133.**

Soft Foot

Soft foot is a condition in which one of the booster feet does not sit flat on the base. Soft foot is usually due to irregularities in the surface to which the booster is mounted. When the bolt on the foot gets tightened, a slight distortion occurs that can affect bearing and seal life as well as internal contact between parts.

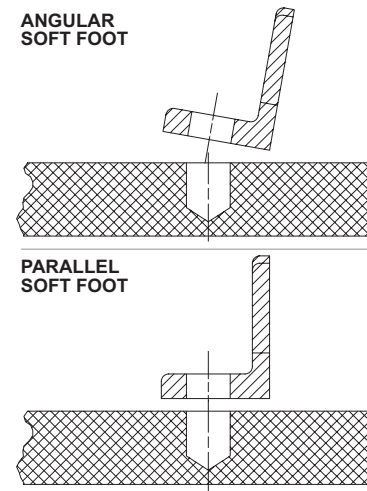


Figure 5-1 – Illustrations of Soft Foot

1. Place the booster on base.
2. Check each foot for gaps between the foot and base (soft foot). Shim as necessary to fill gap within 0.002 in. (0.05 mm). **Figure 5-1** shows the two most common types of soft foot conditions. If either type is present at a measurement of more than 0.003 in. (0.076 mm), the booster may fail prematurely.
3. Tighten all bolts.
4. Mount a dial indicator on base contacting one foot at 12 o'clock position.
5. Loosen the bolt on that foot. Observe indicator travel and add shims as needed to reduce "spring" to less than 0.002 in. (0.05 mm). Repeat steps 4 and 5 on remaining feet.

SAFETY

Kinney recommends the use of relief valves to protect against excessive pressure or vacuum conditions. Test these valves at initial start-up to be sure they are properly adjusted to relieve at or below the maximum pressure differential rating of the booster.

DANGER



It is the responsibility of the installer to assure that proper guarding is in place and compliant with all applicable regulatory requirements.



DANGER



Internal and external rotating parts of the booster and driving equipment can produce serious physical injuries. The booster should never be run with the inlet or discharge piping removed. If it becomes necessary to inspect the rotating parts of the booster or to change V-belts, be absolutely sure that all power to the motor controls has been shut off, the motor controls are locked out, and properly tagged before proceeding.



DANGER

Assure that properly sized vacuum breaks/relief valves are used on the inlet side of the booster. Also assure that properly sized pressure relief valves are used on the outlet of the booster. The sizing shall be such to assure that the proper flow can be achieved without exceeding the rated vacuum and pressure ratings.

DANGER



Booster housing and associated piping or accessories may become hot enough to cause major skin burns on contact.

WARNING



Use lock out/tag out procedures to disable the electrical energy source before any service or work is done on the booster.

WARNING



Avoid extended exposure in close proximity to machinery with high intensity noise levels. Wear adequate ear protection.

NOTE: Use proper care and good procedures in handling, lifting, installing, operating, and maintaining the equipment.

LUBRICATION

Every booster from Kinney is factory-tested, oil-drained, and shipped dry to its installation point. Fill both independent oil reservoirs to the proper level before operation. Oil reservoirs are under the vacuum.

Shaft bearings at the gear end of the booster are splash-lubricated by one or both gears dipping into an oil reservoir formed in the gear end plate and cover. Shaft bearings at the drive end of the booster are lubricated by a slinger assembly dipping into an oil reservoir. Before starting the booster, fill the oil sumps as described in **Filling Procedure on page 14**.

Add oil to the booster in the quantity listed in **Table 4-1 – Specifications on page 8**. Make sure oil level is maintained within the notched area of the sight glass. **See Figure 5-2**. Lower drive boosters have “bull’s eye” type oil level gauges. Maintain oil levels at the center of the glass.



WARNING

Never attempt to change or add lubrication while the booster is running. Failure to heed this warning could result in damage to the equipment or personal injury. Oil must be checked when the booster is NOT running.



WARNING

Properly dispose of the spent lubricants. Refer to the manufacturer of the lubricant and any regulations to assure proper and safe disposal.



WARNING

Do not start the booster until you are sure oil has been put in the gear housing and rear cover. Operation of the booster without proper lubrication will cause the booster to fail and void the warranty.

NOTICE

Assure oil is compatible with copper/yellow metals (if equipped with cooling coils).

NOTICE

See Table 4-1 – Specifications on page 8 for oil capacities.


Filling Procedure

See Recommended Lubricants for blowers and vacuum boosters on page 33 for suggested lubricants and grease.

1. Remove the fill plugs or breathers from both gear end and drive end plates.
2. Slowly pour oil through fill until oil appears in the oil sight glass. Bring the oil level to the center of the sight glass.
3. Verify oil level is at proper level in both gear end and drive end sight glasses.
4. Replace the fill plugs or breathers that were removed in step 1.

VERTICAL FLOW

(BARESHAFT SHOWN)

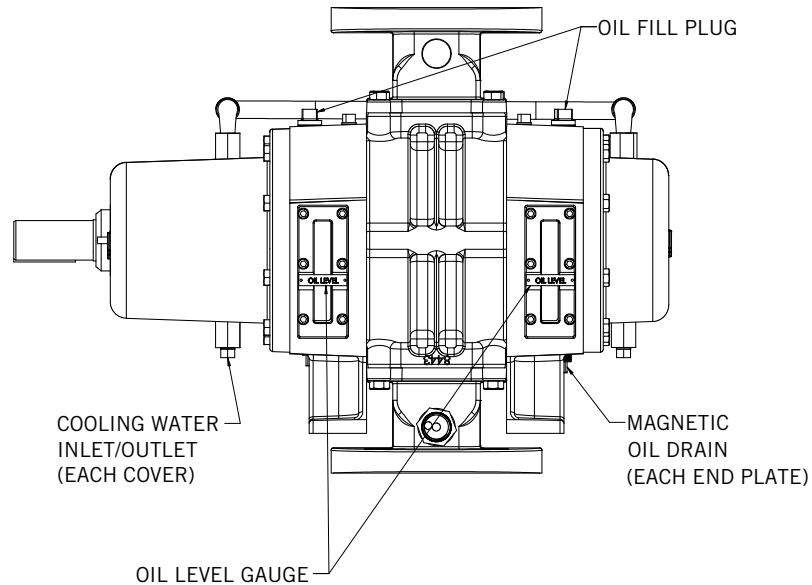

HORIZONTAL FLOW

(C-FLANGE SHOWN)

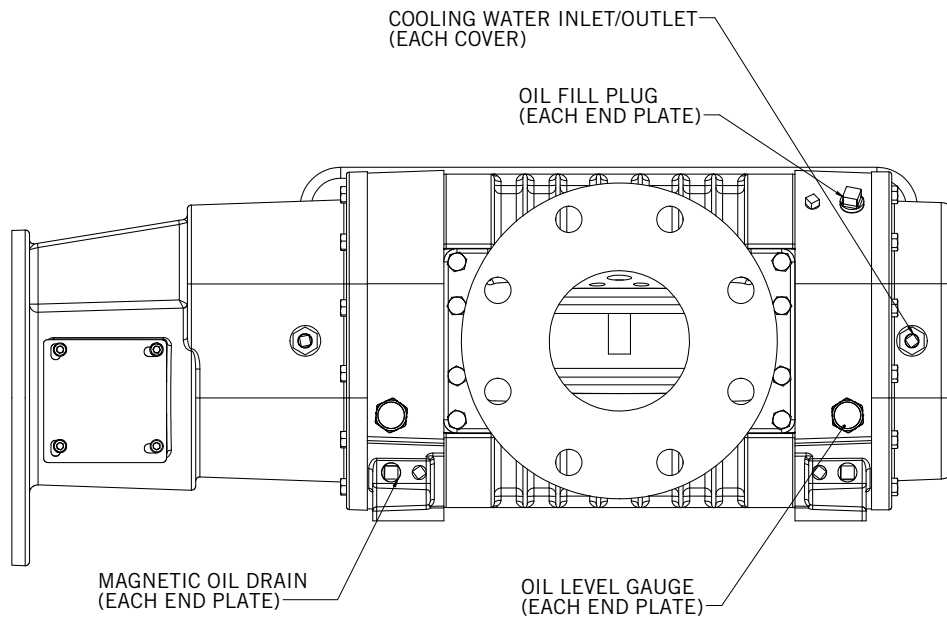


Figure 5-2 – Oil Fill, Drain and Level Plugs, and Level Gauges

Frequently Asked Questions Regarding Lubrication

What is the functional detriment if the “wrong oil” is used?

The lubricant is selected based on bearing speed, gear speed, and operating temperature. If the lubricant is too light, it increases wear by not separating the sliding surfaces and it will not remove the heat adequately. If the lubricant is too thick, the drag in the bearings is increased, causing them to run hotter. Thicker lubricant will not flow as readily into the gears and it will reduce the available backlash. Lubricants at our conditions are incompressible.

What is the functional detriment if the oil is not serviced?

If the lubricant is not serviced at the proper interval, the shearing action in the bearing and the gears will begin to take its toll and the lubricant will thicken. The booster will run hotter and the wear on running surfaces will increase. The lubricant will generally appear dirtier, caused by material rubbing off the components. The lubricant will discolor because of overheating. An indicator of the breakdown of a lubricant is the increase in the Total Acid Number (TAN), and a change of 10 percent in the base viscosity.

Several things are happening as the lubricant goes through the booster. First, it is absorbing frictional energy in the form of heat. This heat has to be dissipated through either surface contact with cooler materials or in a rest volume of lubricant. While reducing the friction, the lubricant is also going through a shearing process and the molecular structure is broken down.

The result is that the lubricant will begin to thicken because of the shorter molecular chains and the drop out of additive packages. The thickened lubricant will cause more drag, increasing the friction and heat, and further degrading the lubricant.

Operation of the booster (environment, run time, speed, and pressure) has a direct effect on duty cycles. The published cycles are based on worst-case conditions.

Hazards Associated With Breakdown or Ignition of Lubrication

DANGER



There is a risk associated with the lubrication media breaking down and resulting in a hazardous fluid or vapor. There may also be a hazard associated with the ignition of the lubrication media. Refer to the lubrication manufacturer's applicable instruction for safety precautions.

PIPING CONNECTIONS

WARNING

Pipe loading on the booster should be negligible as pipe loading can cause distortion of the booster. Use proper supports and pipe hangers to assure that there is no loading.

NOTICE

Remove the protective covers from the inlet and outlet ports and inspect for dirt and foreign material.

Make sure that manifolding is no smaller than the pump connections in order to minimize restrictions to gas flow. Accurately align the mating flanges to the inlet and discharge manifolding to prevent distortion of the booster housing. Temporarily fit a fine-wire mesh filter at the suction port if solid particles are likely to be entrained into the air stream, and remove the filter when particles no longer appear. This is especially desirable on new installations and when manifolds have been welded. Fit the manifolding to and from the booster with flexible connections to isolate vibrations, absorb expansion and contraction due to thermal change, and absorb misalignment differences. If the booster is to be water-cooled, connect a clean supply to the 1/8 in. NPT connection to the bottom

of drive gear end. The drain line will be connected on the bottom of the non-drive end reservoir (see **Figure 5-2** for connection locations). Take care to not overtighten or loosen the bushing for the cooling coil connection. Make sure the bushing is held in place as additional fitting and plumbing is performed.

Hazards Associated With Hazardous Process Fluids

DANGER



It shall be the responsibility of the installer to ensure that piping is adequate, sealing between pipe joints is adequate for the process fluids and proper process and pressure protection devices are in place. It is also the responsibility of the installer to assure that process gasses are not vented in a manner that would be hazardous.

Refer to the manufacturer of the process media to assure that proper safety precautions are in place.

Blockage or Restriction

WARNING

Damage to the booster could occur if there is blockage in the inlet or outlet ports or piping. Care should be taken when installing the booster to assure that there are no foreign objects or restrictions in the ports or piping.

WATER-COOLING INSTRUCTIONS

CAUTION

If the unit is to be located outside or in a building where ambient temperatures can fall below freezing, then care must be taken to ensure the water or liquid used for cooling does not freeze and damage the booster. Cooling coils must be drained of liquid during downtime unless a recirculating unit using a glycol mixture has been installed.

NOTICE


Water cooled end plates are discontinued. See Technical Bulletin 52 for additional details.

NOTICE

Units are never shipped from the manufacturer with liquid in the cooling coils.

Cooling Water Connections

Cooling connections are on each end of the Booster. One side will be the water in connection which will cross over to the other end where the water out connection will be used.

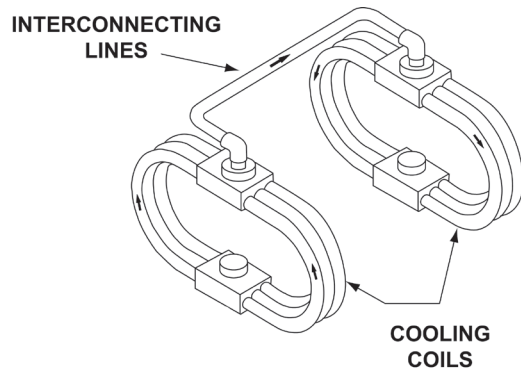

CAUTION:
INCOMING WATER PRESSURE
MUST NOT EXCEED 100 PSIG

Figure 5-3 – Cooling Water Piping Harness

Cooling the oil sumps will prolong the life of the oil and provide proper lubrication quality.

Provide an ON-OFF valve on the incoming line and a regulating valve located in the drain line. Terminate the drain line at an open drain for better regulation of the water flow.

COOLING WATER SPECIFICATIONS

Boosters that will operate with continuous discharge gas temperatures of 250°F (121°C) or more must be connected to a water (liquid) supply in order to maintain reasonable oil temperatures. Generally a water flow of 1/2 to 1 GPM (1.9 – 3.8 L/min) is sufficient to maintain oil temperatures below 150°F (65°C).

MOTOR DRIVES

Two drive connections commonly used are direct drive and V-belt drive.

Direct Coupled

When installing the motor directly to the booster, align the shafts to the coupling according to the coupling manufacturer's instructions. Boosters shipped with motor directly coupled and mounted on a common base have been aligned prior to shipment. Further alignment is not normally necessary, but be sure to check the alignment and make adjustments if necessary prior to starting the booster.

Coupling halves must correctly fit the booster and drive shafts so that only light tapping is required to install each half. The two shafts must be accurately aligned. A direct-coupled booster and motor must be aligned with the two shafts.

Establish proper gap between coupling halves according to the coupling manufacturer's instructions with the motor. Proper gap will minimize the change for end thrust on the booster shaft.

V-Belts

If the motor and booster are V-belt connected, the sheaves on both the motor and booster shafts should be as close to the shaft bearings as possible. Booster sheave is not more than 1/4 in. (6.5 mm) from the booster drive end cover. Take care should when installing sheaves on the booster and motor shafts. Make sure the face is accurately in line to minimize belt wear.

Adjust the belt tension to the to the manufacturer's specifications using a belt tension tester. Check new belts for proper tension after 24 hours of run time. When manufacturer data is not available, industry guidelines recommend 1/64 in. deflection for each inch of span (0.157 mm deflection per centimeter of span) at 8 to 10 lb (3.6 – 4.5 kg) of force in the center of the belt.

Insufficient tensioning is often indicated by slipping (squealing) at start-up. Do not use belt dressing on V-belts. Keep sheaves and V-belts free of oil and grease. Remove tension from belts if the drive is to be inactive for an extended period of time. For more specific information, consult the drive manufacturer. In a V-belt drive, the booster sheave must fit its shaft accurately, run true, and be mounted as close to the bearing housing as possible to minimize bearing loads.

A tight or driving fit will force the drive shaft out of its normal position and cause internal damage. A loose fit will result in shaft damage or breaking. Make sure the motor sheave fits correctly and is properly aligned with the booster sheave.

Adjust motor position on its sliding base so that belt tension is in accordance with drive manufacturer's instructions. Always avoid excessive belt tension. Recheck tension after the first 24 hours of operation and periodically thereafter to avoid slippage and loss of booster speed.

Check the booster after installation and before applying power by rotating the drive shaft by hand.

If the drive shaft does not rotate freely:

- Look for uneven mounting, piping strain, excessive belt tension, or coupling misalignment.
- Check booster at this time to insure oil was added to the reservoirs.

Setting V-Belt Tension

Proper belt tension is essential to long booster life. **Figure 5-4**, **Figure 5-5**, and the following procedures are provided to aid in field-adjusting V-belts (when the booster is so equipped) for maximum performance. A visual inspection of the V-belt drive should yield the appearance shown in **Figure 5-4**.

Factors outside the control of the belt tensioning system used on an individual booster package assembly, such as environmental factors and quality of the belts installed, may contribute to decreased belt life. Such factors can cause wear of the belts beyond the ability of the tensioning system to compensate.

As such, it is recommended to check belt tension monthly and make any manual adjustments found necessary.

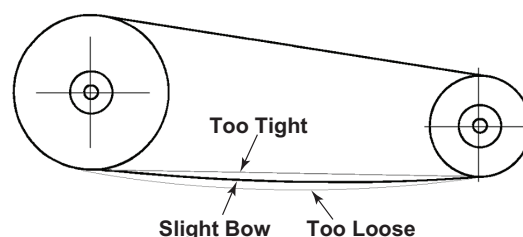


Figure 5-4 – General appearance of a V-belt drive

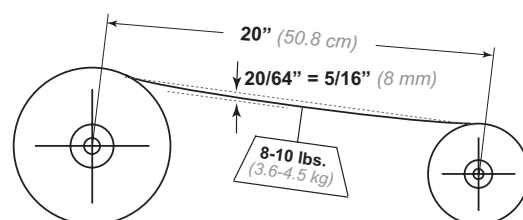


Figure 5-5 – Setting of proper tension for a V-belt drive

1. Turn off and lock out power.
2. Remove the fasteners from the belt guard (if equipped)
3. Remove the belt guard.
4. Check and adjust the belt tension as necessary. Tension should be 1/64 in. deflection per inch of span (0.157 mm deflection per centimeter of span) between sheaves, with 8 – 10 lb (3.6 – 4.5 kg) force applied at the center point of the top section of belt.
5. Install the belt guard, making sure that all drive components are free of contact with the guard.
6. Install the belt guard fasteners that were removed in step 2.
7. Unlock the power and start the booster.
8. Resume normal operation.

V-Belt Troubleshooting

PROBLEM	POSSIBLE CAUSES	SOLUTION
Belts slip (sidewalls glazed)	Not enough tension	Replace belts; apply proper tension.
Drive squeals	Shock load	Apply proper tension.
	Not enough arc of contact	Increase center distance.
	Heavy starting load	Increase belt tension.
Belt(s) turned over	Broken cord caused by prying on sheave	Replace set of belts and install correctly.
	Overloaded drive	Redesign drive.
	Impulse loads	Apply proper tension.
	Misalignment of sheave and shaft	Re-align drive.
	Worn sheave grooves	Replace sheaves.
	Excessive belt vibration	Check drive design. Check equipment for solid mounting. Consider use of banded belts.
Mismatched belts	New belts installed with old belts	Replace belts in matched sets only.
Breakage of belt(s)	Shock loads	Apply proper tension; recheck drive.
	Heavy starting loads	Apply proper tension; recheck drive. Use compensator starting.
	Belt pried over sheaves	Replace set of belts correctly.
	Foreign objects in drives	Provide drive guard.
Rapid belt wear	Sheave grooves worn	Replace sheaves.
	Sheave diameter too small	Redesign drive.
	Mismatched belts	Replace with matched belts.
	Drive overloaded	Redesign drive.
	Belt slips	Increase tension.
	Sheaves misaligned	Align sheaves.
	Oil or heat condition	Eliminate oil. Ventilate drive.

MOTOR AND ELECTRICAL CONNECTIONS



WARNING

The motor and connections shall be protected to assure that product and environmental condensation does not come in contact with the electrical connections.

NOTICE

It is the responsibility of the installer to assure that the motor is in compliance with the latest edition of IEC 60204-1 and all electrical connections are performed per IEC 60204-1, this includes overcurrent protection.

Wire the motor and other electrical devices, such as solenoid valves and temperature switch, to the proper voltage and amperage as indicated on the nameplate of the component being wired. Turn the booster by hand after wiring is completed to determine that there are no obstructions and that the booster turns freely. Then, momentarily start the booster to check the direction of rotation.

Figure 4-2 shows direction of airflow in relation to rotor rotation. The airflow direction can be reversed by reversing the appropriate motor leads.

06

OPERATION

GENERAL

**DANGER**

The booster is not intended to be used with explosive products or in explosive environments. The blower is not intended to be used in applications that include hazardous and toxic gases. Consult the factory for support.

**WARNING**

Do not operate without guards in place.

**WARNING**

Maximum operating speed: **Table 4-1** states the maximum operating speed in RPM (rotations per minute) and maximum temperature. Do not exceed these limits.

Before starting the booster for the first time under power, recheck the installation thoroughly to reduce the likelihood of difficulties. Use the following checklist as a guide, but also consider any other special conditions in your installation.

1. Be certain no bolts, rags, or dirt have been left in booster.
2. Be certain that inlet piping is free of debris. If an open outdoor air intake is used, be sure the opening is clean and protected by an inlet filter. This also applies to indoor use.
3. If installation is not recent, check booster leveling, drive alignment, belt tension, and tightness of all mounting bolts.
4. Be certain the proper volume of oil is in the oil reservoir chambers.
5. Be certain the driving motor is properly lubricated and connected through suitable electrical overload devices.
6. With electrical power off and locked out to prevent accidental starting, rotate the booster shaft several times by hand to make sure the booster is rotating freely. Unevenness or tight spots are indicators of a condition that should be corrected before progressing.
7. Check motor rotation by momentarily pushing the START button and then checking the flow direction of the booster. Reverse the motor connections if flow is in the wrong direction.

Carry out initial operation under “no load” conditions by opening all valves and venting the discharge to atmosphere, if possible. Then, start the motor briefly, listen for unusual noises, and make sure the booster coasts freely to a stop. If no problem appears, repeat this check and let the motor run a little longer. If any questions exist, investigate before proceeding further.

Assuming all tests are satisfactory, the booster will now be ready for continuous full load operation. During the first several days, check periodically to make sure all conditions remain acceptable and

steady. These checks may be particularly important if the booster is part of a process system where conditions may vary. At the first opportunity, stop the booster and clean or remove the inlet filter. Also, recheck leveling, coupling alignment or belt tension, and mounting bolts for tightness.

START-UP CHECKLIST

Kinney recommends that these start-up procedures be followed in sequence and checked off (☒) in the boxes provided in any of the following cases.

<ul style="list-style-type: none"> • During initial installation • After any shutdown period 	<ul style="list-style-type: none"> • After maintenance work has been performed • After booster has been moved to a new location
DATES CHECKED:	<input type="text"/> <input type="text"/> <input type="text"/> <input type="text"/>
<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/>	Check the unit for proper lubrication. Proper oil level is critical. See Lubrication on page 14. See Recommended Lubricants on page 33 for information on acceptable lubricants for the product.
<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/>	Check the V-belt drive for proper belt alignment and tension.
<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/>	Carefully turn the rotors by hand to be certain they do not bind.



WARNING

Disconnect power. Make certain power is off and locked out before touching any rotating element of the booster, motor, or drive components.

<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/>	“Bump” the unit with the motor to check rotation (counterclockwise when facing the shaft) and to be certain it turns freely and smoothly.
<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/>	Start the booster and operate it for 30 minutes at no load. During this time, feel the cylinder for hot spots. If minor hot spots occur, see Troubleshooting on page 29.
<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/>	Apply the load and observe the operation of the booster for 1 hour.
<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/>	If minor malfunctions occur, discontinue operation and see Troubleshooting on page 29.

STARTING

Check the oil for proper level at both ends of the booster. Add or drain oil as necessary to bring the oil to the correct level. **See Figure 4-2.** Too much oil, particularly on the gear end, can result in excessive heat generation. Too little oil will possibly result in failure of the timing gears, bearings, and mechanical seals.

Start the backing pump. When pressure is reduced sufficiently, start booster pump. A pressure switch can be installed to start the booster at a predetermined pressure. If the booster is water-cooled turn on the cooling water when the booster is started. Adjust the water flow so that the discharge water temperature is no more than lukewarm (70° to 80°F [21° to 26°C]).

OPERATING

The upper temperature limits for booster pump operation are between 350° to 375°F (175° to 190°C), measured in the exhaust gas stream with a low mass thermocouple. When this temperature limit switch is installed, as the temperature exceeds the predetermined temperature, the booster motor will stop and cannot be restarted until the temperature drops below the trip setting of the temperature switch.



DANGER

The booster is not intended to be used with explosive products or in explosive environments. The blower is not intended to be used in applications that include hazardous and toxic gases. Consult the factory for support.



WARNING

Physical harm may occur if human body parts are in contact or exposed to the process vacuum. Assure that all connections are protected from human contact.



WARNING

If rated vacuum or pressure levels are exceeded, process fluids will migrate to other parts of the booster and system.



CAUTION



Do not touch hot surfaces.

The upper limit of the booster operation is 375°F (190°C). Do not touch the booster while it is in operation and assure booster is cool when not in operation.



CAUTION

Use of a thermowell insulates the thermocouple. Invalid and delayed readings will result. This can result in ineffective protection devices.

NOTICE

The upper limits are not intended for continuous operation. Consult with factory for detailed information assistance.

STOPPING



CAUTION

Venting the booster to pressures above cut-in while running can damage the pump.

Stop the booster by turning off the motor. Isolate the booster from the vacuum system and vent the booster to atmosphere. Turn off the cooling water if water-cooled. Stop the backing pump. See the component instruction manual.

RECOMMENDED SHUTDOWN PROCEDURE TO MINIMIZE RISK OF FREEZING OR CORROSION

When an air piping system has high humidity or moisture, water condensation can occur after the booster is shut down and it begins to cool. Condensation creates an environment favorable to corrosion of the iron internal surfaces and to ice formation in cold weather. Both conditions can close the operating clearances, causing the booster to fail upon future start-up.

The following shutdown procedure minimizes the risk of moisture condensation, corrosion, and freezing.

NOTICE

Take care not to overload or overheat the booster during this procedure.

1. Isolate the booster from the moist system piping, allowing the booster to intake atmospheric air. Operate the booster under a slight load, allowing the booster to heat within safe limits. The heat generated by the booster will quickly evaporate residual moisture.
2. For carpet cleaning applications, after the work is completed, allow the booster to run 3 – 5 minutes with the suction hose and wand attached. The suction hose and wand will provide enough load to the booster to evaporate the moisture quickly.
3. For extended shutdown, inject a small amount of a light lubricating oil such as 3-in-One® or a spray lubricant such as WD-40® into the inlet of the booster just before shutdown. (*3-in-One and WD-40 are registered trademarks of WD-40 Company.*) The lubricant will provide an excellent protective coating on the internal surfaces. If using a spray lubricant, take care to prevent the applicator tube from getting sucked into the booster. The applicator tube will damage the booster, likely to a degree where repair would be required.
4. If the booster is being taken out of commission for an extended period of time, **see Long-Term Storage on page 28.**

07

MAINTENANCE

GENERAL

Regular inspection of the vacuum booster and its installation, along with complete checks on operating conditions, will pay dividends in added life and usefulness. Also, service the drive per manufacturer's instructions and lubricate the coupling or check belt drive tension. Use thermometers and gauges to make sure that booster operating temperature and pressure remain within allowed limits.

DANGER



The booster and parts may contain hazardous media. Assure that pump and parts are evacuated of hazardous media prior to servicing.

CAUTION

The electrical service must be isolated and de-energized prior to maintenance. Apply appropriate procedures to assure electrical supply is de-energized and cannot be inadvertently energized during maintenance.

Assure piping and product is isolated prior to maintenance of booster. Apply appropriate procedures to assure piping and product is isolated and that inadvertent opening of valves cannot occur during maintenance.

CAUTION

During routine maintenance, inspect and assure that guards are in place and secure.

NOTICE

When changing oil, be sure to reseal the drain and fill plugs. This is especially important on Slinger Splash Lube Series models, which have no mechanical seals on the rotors. Air leaks past these plugs can cause rapid loss of oil from end covers, resulting in booster failure.

Pay special attention to lubrication of timing gears and bearings according to the information in ***Lubrication on page 14.***

When a vacuum booster is taken out of service, it may require internal protection against rusting or corrosion. The need for such protection must be a matter of judgment based on existing conditions as well as length of downtime. Under atmospheric conditions producing rapid corrosion, protect the booster immediately. ***See Long-Term Storage on page 28.***

REGULAR MAINTENANCE

A well-designed maintenance program will add years of service to the booster.

Check a newly installed booster frequently during the first month of operation, especially lubrication. With the booster at rest, check the oil level in both the gear (drive) end and free (non-drive) end of the booster and add oil as needed. Complete oil

changes are recommended every 1,000 – 1,200 operating hours, or more frequently depending on the type of oil and operating temperature. Boosters with mechanical seals on the rotors can generally run the full 1,500 hours before an oil change is required. Also change the oil more frequently if pumping corrosive vapors or where excessive operating temperatures are encountered. The following is recommended as a minimum maintenance program.

DAILY	WEEKLY	MONTHLY
<ol style="list-style-type: none"> 1. Check and maintain oil level, and add oil as necessary. 2. Check for unusual noise or vibration (See Troubleshooting on page 29). 	<ol style="list-style-type: none"> 1. Clean all air filters. A clogged air filter can seriously affect the efficiency of the booster and cause overheating and oil usage. 2. Check the relief valve to make sure it is operating properly. 	<ol style="list-style-type: none"> 1. Inspect the entire system for leaks. 2. Inspect the condition of the oil and change if necessary. 3. Check drive belt tension and tighten if necessary.

NOTICE

Oil levels should be checked every 24 hours of operation.

Proper oil drain schedules require oil be changed before the contaminant load becomes so great that the lubricating function of the oil is impaired or heavy disposition of suspended contaminants occurs. To check the condition of the oil, drain a sample into a clean container and check for the presence of water or solids. Slight discoloration of the oil should not necessitate an oil change.

SPARE PARTS

Should adjustments or replacement be needed, repairs can often be performed locally as described in this manual after obtaining the required parts. Personnel should have a good background of mechanical experience and be thoroughly familiar with the procedures outlined in this manual. For major repairs not covered in this manual, contact the nearest Kinney service representative.

When ordering parts, supply the booster nameplate information, as well as the item number and parts description as per the parts lists and assembly drawings. Repair kits are available for all models. These kits contain all the seals, bearings, O-rings, locks, and special retaining screws necessary for an overhaul. For convenience when ordering parts, complete the **Operating Data Form** included on the inside, back cover of this manual.

In developing a stock of spare parts, consider the following factors:

- The degree of importance in maintaining the booster in a “ready” condition
- The time lag in parts procurement
- Cost
- Shelf life (seals and O-rings)

FACTORY SERVICE AND REPAIR

With proper care, Kinney boosters will give years of reliable service. The parts are machined to very close tolerances and require special tools by mechanics who are skilled at this work. Should major repairs become necessary, contact the factory for the location of the nearest service facility.

NOTICE

Current regulations require Material Safety Data Sheet to be completed and forwarded to Kinney on any booster being returned for any reason that has been handling or involved with hazardous gases or materials. This is for the protection of the employees of Kinney and the service facilities who are required to perform service on this equipment. Failure to do so will result in service delays.

NOTICE

When returning a booster to the factory for repair under warranty, please note the factory will not accept any booster that arrives without authorization. Contact Customer Service Department for return authorization.

LONG-TERM STORAGE

Any time the booster will be stored for an extended period of time, make sure that it is protected from corrosion by following these steps:

1. Spray the interior (lobes, housing, and end plates) with rust preventative. Repeat as conditions dictate and at least on a yearly basis.
2. Fill both end covers completely full of oil.
3. Firmly attach a prominent tag stating that the end covers are full of oil and must be drained and refilled to proper levels before start-up.
4. Apply a rust-preventative grease to the drive shaft.
5. Spray all exposed surfaces, including the inlet and discharge flanges, with rust preventative.
6. Seal inlet, discharge, and vent openings. It is not recommended that the booster be set in place, piped to the system, and allowed to remain idle for a prolonged amount of time. If any component is left open to the atmosphere, the rust preventative will escape and lose its effectiveness.
7. During storage, ensure that the booster does not experience excessive vibration.
8. Attach a desiccant bag to either of the covers to prevent condensation from occurring inside the booster. Make sure any desiccant bag (or bags) is attached to the covers so that they will be removed before start-up of the booster.
9. Store the booster in an air conditioned and heated building if possible. If air conditioned and heated storage is not possible, make conditions as dry as possible.
10. If possible, rotate the drive shaft by hand at least monthly in order to prevent seals from setting in one position.

TROUBLESHOOTING

Although Kinney boosters are well designed and manufactured, problems may occur due to normal wear and the need for readjustment. The following chart lists symptoms that may occur along with probable causes and remedies.

SYMPTOM	PROBABLE CAUSE	REMEDIES
Loss of oil	Gear housing not tightened properly	Tighten gear housing bolts.
	Lip seal failure	Disassemble and replace lip seal.
	Insufficient sealant	Remove gear housing and replace sealant.
	Loose drain plug	Tighten drain plug. See <i>Instruction Manual Vacuum Booster 150-2700 Disassembly and Reassembly</i>.
Excessive bearing or gear wear	Improper lubrication	Correct oil level. Replace dirty oil. See <i>Lubrication on page 14</i>.
	Excessive belt tension	Check belt manufacturer's specifications for tension and adjust accordingly.
	Coupling misalignment	Check carefully. Re-align if necessary.
Lack of volume	Slipping belts	Check belt manufacturer's specifications for tension and adjust accordingly.
	Worn lobe clearances	Check for proper clearances. See <i>Assembly Clearances on page 31</i>.
	Speed too low	Increase booster speed within limits. See <i>Technical Bulletin 1</i>.
	Obstruction in piping	Check system to ensure an open flow path.
Knocking	Booster out of time	Re-time.
	Distortion due to improper mounting or pipe strains	Check mounting alignment and relieve pipe strains.
	Excessive pressure differential	Reduce to manufacturer's recommended pressure. Examine relief valve and reset if necessary.
	Worn gears	Replace timing gears. See <i>Instruction Manual Vacuum Booster 150-2700 Disassembly and Reassembly</i>.

SYMPTOM	PROBABLE CAUSE	REMEDIES
Excessive booster temperature	Too much or too little oil in gear reservoir	Check oil level. See Lubrication on page 14.
	Too low operating speed	Increase booster speed within limits.
	Clogged filter or silencer	Remove cause of obstruction.
	Excessive pressure differential	Reduce pressure differential across the booster.
	Elevated inlet temperature	Reduce inlet temperature.
	Worn lobe clearances	Check for proper clearances. See Assembly Clearances on page 31.
Rotor end or tip drag	Insufficient assembled clearances	Correct clearances. See Assembly Clearances on page 31.
	Case or frame distortion	Check mounting and pipe strain.
	Excessive operating pressure	Reduce pressure differential.
	Excessive operating temperature	Reduce pressure differential or reduce inlet temperature.
Vibration	Belt or coupling misalignment	Check carefully. Re-align if necessary.
	Lobes rubbing	Check cylinder for hot spots, and then check for lobe contact at these points. Correct clearances. See Assembly Clearances on page 31.
	Worn bearings or gears	Check condition of gears and bearings. Replace if necessary.
	Unbalanced or rubbing lobes	Possible build-up on casing or lobes, or inside lobes. Remove build-up and restore clearances.
	Driver or booster loose	Check mounting and tighten if necessary.
	Piping resonance	Check pipe supports, check resonance of nearby equipment, and check foundation.

ASSEMBLY CLEARANCES

MODEL	GEAR END	FREE END	INTERLOBE	TIP-DOWEL	TIP-PORT
150	0.003 – 0.005 in. (0.08 – 0.13 mm)	0.006 – 0.010 in. (0.15 – 0.25 mm)	CENTER TIMED	0.003 – 0.007 in. (0.08 – 0.18 mm)	0.006 – 0.010 in. (0.15 – 0.25 mm)
240	0.003 – 0.005 in. (0.08 – 0.13 mm)	0.012 – 0.017 in. (0.30 – 0.43 mm)		0.003 – 0.007 in. (0.08 – 0.18 mm)	0.006 – 0.010 in. (0.15 – 0.25 mm)
400	0.003 – 0.005 in. (0.08 – 0.13 mm)	0.012 – 0.017 in. (0.30 – 0.43 mm)		0.003 – 0.007 in. (0.08 – 0.18 mm)	0.006 – 0.010 in. (0.15 – 0.25 mm)
540	0.004 – 0.007 in. (0.10 – 0.18 mm)	0.011 – 0.016 in. (0.28 – 0.41 mm)	CENTER TIMED	0.017 – 0.022 in. (0.43 – 0.56 mm)	0.017 – 0.022 in. (0.43 – 0.56 mm)
720	0.004 – 0.007 in. (0.10 – 0.18 mm)	0.011 – 0.016 in. (0.28 – 0.41 mm)		0.017 – 0.022 in. (0.43 – 0.56 mm)	0.017 – 0.022 in. (0.43 – 0.56 mm)
850	0.004 – 0.007 in. (0.10 – 0.18 mm)	0.011 – 0.016 in. (0.28 – 0.41 mm)	CENTER TIMED	0.007 – 0.012 in. (0.18 – 0.30 mm)	0.011 – 0.016 in. (0.28 – 0.41 mm)
1200	0.004 – 0.007 in. (0.10 – 0.18 mm)	0.014 – 0.019 in. (0.36 – 0.48 mm)		0.007 – 0.012 in. (0.18 – 0.30 mm)	0.011 – 0.016 in. (0.28 – 0.41 mm)
1600	0.004 – 0.007 in. (0.10 – 0.18 mm)	0.017 – 0.022 in. (0.43 – 0.56 mm)		0.007 – 0.012 in. (0.18 – 0.30 mm)	0.011 – 0.016 in. (0.28 – 0.41 mm)
2000	0.004 – 0.007 in. (0.10 – 0.18 mm)	0.021 – 0.026 in. (0.53 – 0.66 mm)		0.007 – 0.012 in. (0.18 – 0.30 mm)	0.011 – 0.016 in. (0.28 – 0.41 mm)
2700	0.004 – 0.007 in. (0.10 – 0.18 mm)	0.025 – 0.030 in. (0.64 – 0.76 mm)		0.008 – 0.013 in. (0.20 – 0.33 mm)	0.012 – 0.017 in. (0.30 – 0.43 mm)

10

TORQUE CHART

Data shown represents “wet” torque values.

PART DESCRIPTION	TORQUE
CAP SCREW 10-32UNF	3 ft-lb (4 N-m)
CAP SCREW 1/4"-20UNC GR5	6 ft-lb (8 N-m)
CAP SCREW 5/16"-18UNC GR5	13 ft-lb (18 N-m)
CAP SCREW 3/8"-16UNC GR5	23 ft-lb (31 N-m)
CAP SCREW 1/2"-13UNC GR5	57 ft-lb (77 N-m)
CAP SCREW 5/8"-14UNC GR5	113 ft-lb (153 N-m)
CAP SCREW 3/4"-10UNC GR5	200 ft-lb (271 N-m)

RECOMMENDED LUBRICANTS

RECOMMENDED LUBRICANTS FOR BLOWERS AND VACUUM BOOSTERS

Positive displacement blowers and vacuum boosters require proper lubrication for bearings, seals and gears to operate effectively and efficiently. Oil is distributed from the oil reservoir to the critical components by means of oil slingers that are attached to the rotor shaft. In certain models of CP Series blowers, a high-performance grease rated for high temperatures is used on the drive-end bearings.

MD full synthetic lubricants are recommended for blowers and vacuum boosters. MD lubricants are specifically formulated using unique additives that provide maximum protection and extend the life of your product over mineral oils or semi-synthetic lubricants.



WARNING

Do not overfill the oil sumps. Overfilling can result in gear damage or oil leaks.



CAUTION

Units are shipped without oil in the sumps. Ensure adequate oil has been added before operating.

MD oils are suitable for a wide range of operating temperatures that are based on model, operating speed and discharge temperature of the product.

FOR OXYGEN-ENRICHED SERVICE

Blowers and vacuum boosters operated in oxygen enriched applications should only use non-flammable, PFPE full synthetic lubricants. Blowers and vacuum boosters used in hydrogen service should only MD full synthetic oil

NOTE: Oxygen-enriched service only applicable for PD Plus blowers and vacuum boosters.



CAUTION

M-D Pneumatics and Kinney does not accept responsibility for damage caused by use of lubricants that are not recommended by M-D Pneumatics and Kinney.

MD BLOWER & BOOSTER LUBRICANTS SPECIFICATIONS:				
PRODUCTS	MD ONE	MD PLUS	MD MAX	MD FG
VISCOSITY INDEX	150	154	157	141
@40°C, CST	99.1	231.7	340.9	99.3
@100°C, CST	14.4	27.6	37.2	13.9
FLASH POINT °F (°C)	510 (266)	480 (249)	491 (255)	515 (268)
POUR POINT °F (°C)	- 44 (-43)	-49 (-45)	-54 (-48)	-60 (-51)

NOTE: MD One Vapor Pressure: (mm Hg) 100°F <0.00004; 200°F <0.00018

MD BLOWER & BOOSTER LUBRICANTS OPTIONS					
MD OIL TYPE	1 QUART	1 GALLON	5 GALLON	55 GALLON BARREL	CASE 12 QUARTS
MD ONE	16444-MD1-Q	16444-MD1-G	16444-MD1-5G	16444-MD1-B	16444-MD1-Q-C
MD PLUS	16444-MD2-Q	16444-MD2-G	16444-MD2-5G	16444-MD2-B	16444-MD2-Q-C
MD MAX	16444-MD3-Q	16444-MD3-G	16444-MD3-5G	16444-MD3-B	16444-MD3-Q-C
MD FG	16444-MD1-Q-FG	16444-MD1-G-FG	16444-MD1-5G-FG	16444-MD1-B-FG	16444-MD1-Q-C-FG

PARTS LIST

Parts List for Model 150 to 400 Series – Mechanical Splash Lube

Item No.	PART DESCRIPTION	QTY
1	ROTOR	2
3	HOUSING	1
4	ENDPLATE (see TB51,53)	2
6	COVER D.E.	1
7	COVER F.E.	1
8	GEAR ASSEMBLY	1
9	BEARING, BALL, 2 ROW	2
10	BEARING, ROLL CYLINDER	2
14	BEARING RETAINER	2
16	SHIM, TIMING, .010"	2
16	SHIM, TIMING, .003"	6
16	SHIM, TIMING, .005"	2
17	SPACER	2
21	SLINGER, OIL	1
22	PIN, DOWEL, 3/8 X 7/8	6
23	KEY, 1/4 SQUARE X 1 3/4	1
24	KEY, GEAR TIMING	2
25	WASHER, ROTOR SHAFT	4
26	SCREW, CAP, HEX HEAD, 1/4	12
26	SCREW, CAP, HEX HEAD, 1/4	12
29	SCREW, CAP, SOCKET HEAD, 3/8	4
30	SCREW, CAP, HEX HEAD, 1/4	8
31	PLUG, MAG, 3/8 SQUARE HEAD	2
38	PORT	2
40	SCREW, CAP, HEX HEAD, 5/16	24
42	NAMEPLATE	1
45	SHAFT, DRIVE	1
50	BEARING, BALL, 2 ROW	1
51	SEAL, LAB	4
54	SEAL, MECH	4
57	SPACER	2
66	SCREW, CAP, SOCKET HEAD, 5/16	2
67	SPACER	2
74	SPACER	1
75	O-RING, VITON	1
76	SEAL, MECH	1
77	SPACER	1

Item No.	PART DESCRIPTION	QTY
82	WASHER DUST	1
83	LOCKNUT	1
85	PLUG, PIPE, 1/4 HEX, STEEL	9
94	COIL, COOLING- COPPER	2
95	O-RING, FKM	2
96	O-RING, VITON A	2
97	BUSH, COOLING COIL, BRASS	2
98	PLUG, PIPE, 1/8 SQUARE, STEEL	9
118	SHIM, .010 THICK	2
121	PLUG, PIPE, 3/8 SQUARE, STEEL	2
123	BEARING SPACER	2
166	CONNECTOR, HOSE, 1/4 X 1/8 MPT - BRASS	2
174	PLUG, PIPE, 1/2 HEX, STEEL	2
180	ELBOW, STREET - 1/8" NPT - BRASS	2
181	HOSE, ID, 1/4	1
195	LIFTING LUG	2
234	TAG, OIL LEVEL	4
241	SCREW, HH CAP 10-32 X .63 STEEL NYLOK	24
242	FRAME, SIGHT GAUGE	4
243	WINDOW, SIGHT GLASS GAUGE	4
244	GASKET, WINDOW	4
245	GASKET, FRAME	4
274	HOSE, ID, 1/4	10
500	THERMOSWITCH **35 FT-LB TORQUE**	1

NOTE:

- QUANTITIES SHOWN ARE MAXIMUM VALUES. QUANTITIES MAY VARY BETWEEN BLOWER.

PARTS KITS ARE AVAILABLE. CONSULT AUTHORIZED REPRESENTATIVE FOR PART NUMBERS.

Parts List for Model 150 to 400 Series – Slinger Splash Lube

ITEM NO.	PART DESCRIPTION	QTY
1	ROTOR	2
3	HOUSING	1
4	ENDPLATE	2
6	COVER D.E.	1
7	COVER F.E.	1
8	GEAR ASSEMBLY	1
9	BEARING, BALL, 2 ROW	2
10	BEARING, ROLL CYLINDER	2
14	BEARING RETAINER	2
16	SHIM, TIMING, .010"	2
16	SHIM, TIMING, .003"	6
16	SHIM, TIMING, .005"	2
17	SPACER	2
21	SLINGER, OIL	1
22	PIN, DOWEL, 3/8 X 7/8	6
23	KEY, 1/4 SQUARE X 1 3/4	1
24	KEY, GEAR TIMING	2
25	WASHER, ROTOR SHAFT	4
26	SCREW, CAP, HEX HEAD, 1/4	24
29	SCREW, CAP, SOCKET HEAD, 3/8	4
31	PLUG MAG-3/4- 16UNF HEX HEAD W/O-RING	2
38	PORT	2
40	SCREW, CAP, HEX HEAD, 5/16	24
42	NAMEPLATE	1
42	TAG, WARNING	1
45	SHAFT, DRIVE	1
50	BEARING, BALL, 2 ROW	1
57	SPACER	2
62	SCREW, CAP, HEX HEAD, 1/4	8
66	SCREW, CAP, SOCKET HEAD, 5/16	2
67	SPACER	2
74	SPACER	1
75	O-RING, VITON	1
76	SEAL, MECH	1
77	SPACER	1
79	SLINGER, SEAL STATOR	4
82	WASHER DUST	1
83	LOCKNUT	1

ITEM NO.	PART DESCRIPTION	QTY
85	PLUG, PIPE, 1/4 HEX, STEEL	4
94	COIL, COOLING- COPPER	2
95	O-RING, FKM	4
96	O-RING, VITON A	4
97	BUSH, COOLING COIL, BRASS	4
98	PLUG, PIPE, 1/8 SQUARE, STEEL	2
118	SHIM, .010 THICK	2
123	BEARING SPACER	2
166	CONNECTOR, HOSE, 1/4 X 1/8 MPT - BRASS	2
174	PLUG, PIPE, 1/2 HEX, STEEL	1
180	ELBOW, STREET - 1/8" NPT - BRASS	2
181	HOSE, ID, 1/4	21
195	LIFTING LUG	2
234	TAG, OIL LEVEL	4
238	SLINGER, SEAL ROTOR	4
241	SCREW, HH CAP 10-32 X .63 STEEL NYLOK	24
242	FRAME, SIGHT GAUGE	4
243	WINDOW, SIGHT GLASS GAUGE	4
244	GASKET, WINDOW	4
245	GASKET, FRAME	4
346	PLUG, STRAIGHT THREAD, 3/4, STEEL	2
500	THERMOSWITCH **35 FT-LB TORQUE**	1
506	CAPLUG, COOLING COIL, 1/8" NPT, RED	2

NOTE:

- QUANTITIES SHOWN ARE MAXIMUM VALUES. QUANTITIES MAY VARY BETWEEN BLOWER.

PARTS KITS ARE AVAILABLE. CONSULT AUTHORIZED REPRESENTATIVE FOR PART NUMBERS.

Parts List for Model 150 to 400 Series – C-flange

ITEM NO.	PART DESCRIPTION	QTY
1	ROTOR	2
3	HOUSING	1
4	ENDPLATE (see TB51,53)	2
6	C-FLANGE COVER DE	1
7	COVER F.E.	1
8	GEAR ASSEMBLY	1
9	BEARING, BALL, 2 ROW	2
10	BEARING, ROLL CYLINDER	2
13	SEAL, LIP	1
14	BEARING RETAINER	2
16	SHIM, TIMING, .010"	2
16	SHIM, TIMING, .003"	6
16	SHIM, TIMING, .005"	2
17	SPACER	2
21	SLINGER, OIL	1
22	PIN, DOWEL, 3/8 X 7/8	6
23	KEY, 3/16 SQUARE X 7/8	1
24	KEY, GEAR TIMING	2
25	WASHER, ROTOR SHAFT	4
26	SCREW, CAP, HEX HEAD, 1/4	24
29	SCREW, CAP, SOCKET HEAD, 3/8	4
30	SCREW, CAP, HEX HEAD, 1/4	8
31	PLUG, MAG, 3/8 SQUARE HEAD	2
38	PORT, 4" FLANGE	2
40	SCREW, CAP, HEX HEAD, 5/16	24
42	NAMEPLATE	1
45	SHAFT, DRIVE, C-FLANGE	1
51	SEAL, LAB	4
54	SEAL, MECH	4
57	SPACER	2
66	SCREW, CAP, SOCKET HEAD, 5/16	2
67	SPACER	2
76	SEAL, MECH	1
85	PLUG, PIPE, 1/4 HEX, STEEL	4
94	COIL, COOLING- COPPER	2
95	O-RING, FKM	4
96	O-RING, VITON A	4
97	BUSH, COOLING COIL, BRASS	4

ITEM NO.	PART DESCRIPTION	QTY
98	PLUG, PIPE, 1/8 SQUARE, STEEL	4
121	PLUG, PIPE, 3/8 SQUARE, STEEL	2
123	BEARING SPACER	2
166	CONNECTOR, HOSE, 1/4 X 1/8 MPT - BRASS	2
174	PLUG, PIPE, 1/2 HEX, STEEL	1
180	ELBOW, STREET - 1/8" NPT - BRASS	2
181	HOSE, ID, 1/4	21
195	LIFTING LUG	2
234	TAG, OIL LEVEL	4
241	SCREW, HH CAP 10-32 X .63 STEEL NYLOK	24
242	FRAME, SIGHT GAUGE	4
243	WINDOW, SIGHT GLASS GAUGE	4
244	GASKET, WINDOW	4
245	GASKET, FRAME	4
303	C-FLANGE COVER	2
309	SCREW, CAP, SOCKET HEAD, 1/4 X .500 LONG	8
500	THERMOSWITCH **35 FT-LB TORQUE**	1

NOTE:

- QUANTITIES SHOWN ARE MAXIMUM VALUES. QUANTITIES MAY VARY BETWEEN BLOWER.

PARTS KITS ARE AVAILABLE. CONSULT AUTHORIZED REPRESENTATIVE FOR PART NUMBERS.

Parts List for Model 540 to 720 Series – Mechanical Splash Lube

ITEM NO.	PART DESCRIPTION	QTY
1	ROTOR	2
3	HOUSING	1
4	ENDPLATE	2
6	COVER D.E.	1
7	COVER F.E.	1
8	GEAR ASSEMBLY	1
9	BEARING, BALL, 2 ROW	2
10	BEARING, ROLL CYLINDER	2
14	BEARING RETAINER	2
21	SLINGER, OIL	1
22	PIN, DOWEL, 3/8 X 7/8	6
23	KEY, 1/4 SQUARE X 1 3/4	1
24	KEY, GEAR TIMING	2
25	WASHER, ROTOR SHAFT	1
26	SCREW, CAP, HEX HEAD, 5/16	28
29	SCREW, CAP, SOCKET HEAD, 3/8	1
31	PLUG, MAG, 3/8 SQUARE HEAD	2
35	LOCKNUT, GEAR	2
36	WASHER, GEAR LOCK	2
38	PORT, 4 FLANGE	2
40	SCREW, CAP, HEX HEAD, 3/8	28
42	NAMEPLATE	1
45	SHAFT DRIVE	1
50	BEARING, BALL, 2 ROW	1
51	SEAL, LAB	4
54	SEAL, MECH	4
62	SCREW, CAP, FLATHEAD, #10 NYLOK	8
65	PLATE, LOCK, DRIVE SHAFT	2
66	SCREW, CAP, HEX HEAD	4
68	PIN, DOWEL, 1/8 X 1 1/4	1
69	SCREW, CAP, SOCKET HEAD, 3/8	1
74	SPACER	1
75	O-RING, VITON	1
76	SEAL, MECH	1
77	SPACER - DRIVE SHAFT	1
82	WASHER DUST	1

ITEM NO.	PART DESCRIPTION	QTY
83	LOCKNUT	1
85	PLUG, PIPE, 1/4 HEX, STEEL	5
86	SHIM, .010 THICK	2
94	COOLING COIL, BRASS / COPPER	2
95	O-RING, VITON A	4
96	O-RING, VITON A	4
97	BUSH, MANIFOLD, BRASS	4
98	PLUG, PIPE, 1/8 SQUARE, STEEL	6
118	SHIM, .003 THICK	1
121	PLUG, PIPE, 3/8 SQUARE, STEEL	2
123	SPACER	2
166	CONNECTOR, HOSE, 1/4 X 1/8 MPT - BRASS	2
174	PLUG, PIPE, 1/2 HEX, STEEL	1
180	ELBOW, STREET - 1/8" NPT - BRASS	2
181	HOSE, ID, 1/4	1
195	LIFTING LUG	2
234	TAG, OIL LEVEL	4
241	SCREW, HH CAP 10-32 X .63 STEEL NYLOK	24
242	FRAME, SIGHT GAUGE	4
243	WINDOW, SIGHT GLASS GAUGE	4
244	GASKET, WINDOW	4
245	GASKET, FRAME	4
500	THERMOSWITCH **35 FT-LB TORQUE**	1

NOTE:

- QUANTITIES SHOWN ARE MAXIMUM VALUES. QUANTITIES MAY VARY BETWEEN BLOWER.

PARTS KITS ARE AVAILABLE. CONSULT AUTHORIZED REPRESENTATIVE FOR PART NUMBERS.

Parts List for Model 540 to 720 Series – Slinger Splash Lube

ITEM NO.	PART DESCRIPTION	QTY
1	ROTOR	2
3	HOUSING	1
4	ENDPLAT	2
6	COVER D.E	1
7	COVER F.E.	1
8	GEAR ASSEMBLY	1
9	BEARING, BALL, 2 ROW	2
10	BEARING, ROLL CYLINDER	2
14	BEARING RETAINER	2
21	SLINGER, OIL	1
22	PIN, DOWEL, 3/8 X 7/8	6
23	KEY, 1/4 SQUARE X 1 3/4	1
24	KEY, GEAR TIMING	2
25	WASHER, ROTOR SHAFT	1
26	OBS, --SCREW, CAP, SOCKET HEAD, 5/16	28
29	SCREW, CAP, SOCKET HEAD, 3/8	1
31	PLUG, MAGNETIC, 1/2-20 STRAIGHT THREAD	2
35	LOCKNUT, GEAR	2
36	WASHER, GEAR LOCK	2
38	PORT, 4 FLANGE	2
40	SCREW, CAP, HEX HEAD, 3/8	28
42	NAMEPLATE	1
45	SHAFT DRIVE	1
50	BEARING, BALL, 2 ROW	1
62	SCREW, CAP, FLATHEAD, #10 NYLOK	8
65	PLATE, LOCK, DRIVE SHAFT	2
66	SCREW, CAP, HEX HEAD	4
68	PIN, DOWEL, 1/8 X 1 1/4	1
69	SCREW, CAP, SOCKET HEAD, 3/8	1
74	SPACER	1
75	O-RING, VITON	1
76	SEAL, MECH	1
77	SPACER - DRIVE SHAFT	1
79	SLINGER, SEAL STATOR	4
82	WASHER DUST	1

ITEM NO.	PART DESCRIPTION	QTY
83	LOCKNUT	1
85	PLUG, PIPE, 1/4 HEX, STEEL	4
86	SHIM, .010 THICK	1
93	SCREW, CAP, SOCKET HEAD, 1/4-20	4
94	COOLING COIL, BRASS / COPPER	2
95	O-RING, VITON A	4
96	O-RING, VITON A	4
97	BUSH, MANIFOLD, BRASS	4
98	PLUG, PIPE, 1/8 SQUARE, STEEL	2
118	SHIM, .003 THICK	2
123	SPACER	2
166	CONNECTOR, HOSE, 1/4 X 1/8 MPT - BRASS	2
174	PLUG, PIPE, 1/2 HEX, STEEL	1
180	ELBOW, STREET - 1/8" NPT - BRASS	2
181	HOSE, ID, 1/4	1
195	LIFTING LUG	2
234	TAG, OIL LEVEL	2
238	SLINGER, SEAL ROTOR	4
241	SCREW, HH CAP 10-32 X .63 STEEL NYLOK	24
242	FRAME, SIGHT GAUGE	4
243	WINDOW, SIGHT GLASS GAUGE	4
244	GASKET, WINDOW	4
245	GASKET, FRAME	4
329	PLUG, STRAIGHT THREAD, 1/2, STEEL	2
500	THERMOSWITCH **35 FT-LB TORQUE**	1

NOTE:

- QUANTITIES SHOWN ARE MAXIMUM VALUES. QUANTITIES MAY VARY BETWEEN BLOWER.

PARTS KITS ARE AVAILABLE. CONSULT AUTHORIZED REPRESENTATIVE FOR PART NUMBERS.

Parts List for Model 540 to 720 Series – C-flange

ITEM NO.	PART DESCRIPTION	QTY
1	ROTOR	2
3	HOUSING	1
4	ENDPLATE	2
6	C-FLANGE COVER DE	1
7	COVER F.E.	1
8	GEAR ASSEMBLY	1
9	BEARING, BALL, 2 ROW	2
10	BEARING, ROLL CYLINDER	2
13	SEAL,LIP	1
14	BEARING RETAINER	2
21	SLINGER, OIL	1
22	PIN, DOWEL, 3/8 X 7/8	6
23	KEY,1/4 SQUARE X 1 3/4	1
24	KEY, GEAR TIMING	2
25	WASHER, ROTOR SHAFT	1
26	SCREW, CAP, HEX HEAD, 5/16	28
29	SCREW, CAP, SOCKET HEAD, 3/8	1
31	PLUG, MAG, 3/8 SQUARE HEAD	2
35	LOCKNUT, GEAR	2
36	WASHER, GEAR LOCK	2
38	PORT	2
40	SCREW, CAP, HEX HEAD, 3/8	28
42	NAMEPLATE	1
45	SHAFT, DRIVE, 4000 C-FLANGE	1
51	SEAL,LAB	4
54	SEAL, MECH	4
62	SCREW, CAP, FLATHEAD, #10 NYLOK	8
65	PLATE, LOCK, DRIVE SHAFT	2
66	SCREW, CAP, HEX HEAD	4
68	PIN, DOWEL, 1/8 X 1 1/4	1
69	SCREW, CAP, SOCKET HEAD, 3/8	1
76	SEAL,MECH	1
85	PLUG, PIPE, 1/4 HEX, STEEL	4

ITEM NO.	PART DESCRIPTION	QTY
94	COOLING COIL, BRASS / COPPER	2
95	O-RING, VITON A	4
96	O-RING, VITON A	4
97	BUSH, MANIFOLD, BRASS	4
98	PLUG, PIPE, 1/8 SQUARE, STEEL	4
121	PLUG, PIPE, 3/8 SQUARE, STEEL	2
123	SPACER	2
166	CONNECTOR, HOSE, 1/4 X 1/8 MPT - BRASS	2
174	PLUG, PIPE, 1/2 HEX, STEEL	1
180	ELBOW, STREET - 1/8" NPT - BRASS	2
181	HOSE, ID, 1/4	24
195	LIFTING LUG	2
234	TAG, OIL LEVEL	4
241	SCREW, HH CAP 10-32 X .63 STEEL NYLOK	24
242	FRAME, SIGHT GAUGE	4
243	WINDOW, SIGHT GLASS GAUGE	4
244	GASKET, WINDOW	4
245	GASKET, FRAME	4
303	C-FLANGE COVER	2
309	SCREW, CAP, SOCKET HEAD, 1/4 X.500 LONG	8
500	THERMOSWITCH **35 FT-LB TORQUE**	1

NOTE:

- QUANTITIES SHOWN ARE MAXIMUM VALUES. QUANTITIES MAY VARY BETWEEN BLOWER.

PARTS KITS ARE AVAILABLE. CONSULT AUTHORIZED REPRESENTATIVE FOR PART NUMBERS.

Parts List for Model 850 to 2700 Series – Mechanical Splash Lube

ITEM NO.	PART DESCRIPTION	QTY
1	ROTOR	2
3	HOUSING	1
4	ENDPLT (see TB51,53)	2
6	COVER D.E.	1
7	COVER F.E.	1
8	GEAR ASSEMBLY	1
9	BEARING, BALL, 2 ROW	2
10	BEARING, ROLL CYLINDER	2
14	BEARING RETAINER	2
21	SLINGER, OIL, WELDED	1
22	PIN, DOWEL, 5/8 X 1 1/4	6
23	KEY, 3/8 SQUARE X 2 15/16	1
24	KEY, GEAR TIMING	2
25	WASHER, ROTOR SHAFT	1
26	SCREW, CAP, HEX HEAD, 1/2 x 4-1/4	28
29	SCREW, CAP, SOCKET HEAD, CS 1/2 X 1	1
30	SCR, CAP, SOCKET HEAD, 5/16-18 NYLOK	6
30	SCREW, CAP, SOCKET HEAD, 5/16-18 NYLOK	8
31	PLUG, MAGNETIC, 1/2 SQUARE HEAD	2
35	LOCKNUT, GEAR	2
36	LOCKWASHER, GEAR	2
38	PORT	1
40	SCREW, CAP, HEX HEAD, 1/2 X 1-1/4	20
42	NAMEPLATE	1
45	SHAFT, DRIVE, 1 1/2 DIAMETER	1
48	PORT	1
50	BEARING, BALL, 1 ROW W/ SHIELD	1
51	SEAL, LAB	4
54	SEAL, MECH	4
57	BEARING SPACER	1
65	PLATE, LOCK, DRIVE SHAFT	2
66	SCREW, CAP, HEX HEAD 1/2 X 1-3/4	4
68	PIN, ROLL, 1/4 X 1	1
69	SCREW, CAP, SOCKET HEAD, CS 1/2X1-3/4	1
74	SPACER	1

ITEM NO.	PART DESCRIPTION	QTY
75	O-RING, VITON A	1
76	SEAL, MECH	1
77	SPACER	1
82	WASHER DUST	1
83	LOCKNUT, DRIVE SHAFT, N-08 W/NYLON	1
85	PLUG, PIPE, 1/4 HEX, STEEL	9
94	COOLING COILS, COPPER	2
95	O-RING, VITON A	4
96	O-RING, VITON A	4
97	BUSH, MANIFOLD, BRASS	4
98	PLUG, PIPE, 1/8 SQUARE, STEEL	10
123	BEARING SPACER	2
166	CONNECTOR, HOSE, 1/4 X 1/8 MPT - BRASS	3
174	PLUG, PIPE, 1/2 HEX, STEEL	7
180	ELBOW, STREET - 1/8" NPT - BRASS	2
181	HOSE, ID, 1/4	20
195	LIFTING LUG	2
225	SCREW, CAP, HEX HEAD, 1/4-20 NYLOK	4
234	TAG, OIL LEVEL	4
241	SCREW, HH CAP 10-32 X .63 STEEL NYLOK	24
242	FRAME, SIGHT GAUGE	4
244	GASKET, WINDOW	4
245	GASKET, FRAME	4
274	HOSE, ID, 1/4	14.5
500	THERMOSWITCH **35 FT-LB TORQUE**	1

NOTE:

- QUANTITIES SHOWN ARE MAXIMUM VALUES. QUANTITIES MAY VARY BETWEEN BLOWER.

PARTS KITS ARE AVAILABLE. CONSULT AUTHORIZED REPRESENTATIVE FOR PART NUMBERS.

Parts List for Model 850 to 2700 Series – Slinger Splash Lube

ITEM NO.	PART DESCRIPTION	QTY
1	ROTOR	2
3	HOUSING	1
4	ENDPLATE	2
6	COVER D.E.	1
7	COVER F.E.	1
8	GEAR ASSEMBLY	1
9	BEARING, BALL, 2 ROW	2
10	BEARING, ROLL CYLINDER	2
14	BEARING RETAINER	2
21	SLINGER, OIL, WELDED	1
22	PIN, DOWEL, 5/8 X 1 1/4	6
23	KEY, 3/8 SQUARE X 2 15/16	1
24	KEY, GEAR TIMING	2
25	WASHER, ROTOR SHAFT	1
26	SCREW, CAP, HEX HEAD, 1/2 x 4-1/4	28
29	SCREW, CAP, SOCKET HEAD, CS 1/2 X 1	1
31	PLUG, MAGNETIC, 7/8-14 HEX HEAD	2
35	LOCKNUT, GEAR	2
36	LOCKWASHER, GEAR	2
38	PORT	1
40	SCREW, CAP, HEX HEAD, 1/2 X 1-1/4	20
42	NAMEPLATE	1
45	SHAFT, DRIVE, 1 1/2 DIAMETER	1
48	PORT	1
50	BEARING, BALL, 1 ROW W/ SHIELD	1
57	BEARING SPACER	1
62	SCREW, CAP, SOCKET HEAD, 5/16-18 NYLOK	8
65	PLATE, LOCK, DRIVE SHAFT	2
66	SCREW, CAP, HEX HEAD 1/2 X 1-3/4	4
68	PIN, ROLL, 1/4 X 1	1
69	SCREW, CAP, SOCKET HEAD, CS 1/2X1-3/4	1
74	SPACER	1
75	O-RING, VITON A	1
76	SEAL, MECH	1

ITEM NO.	PART DESCRIPTION	QTY
77	SPACER	1
79	SLINGER, SEAL STATOR	4
82	WASHER DUST	1
83	LOCKNUT, DRIVE SHAFT, N-08 W/NYLON	1
85	PLUG, PIPE, 1/4 HEX, STEEL	9
86	SHIM, TIMING	2
93	SCREW, CAP, SOCKET HEAD, 1/4-20	4
94	COOLING COILS, COPPER	2
95	O-RING, VITON A	4
96	O-RING, VITON A	4
97	BUSH, MANIFOLD, BRASS	4
98	PLUG, PIPE, 1/8 SQUARE, STEEL	5
123	BEARING SPACER	2
166	CONNECTOR, HOSE, 1/4 X 1/8 MPT - BRASS	2
174	PLUG, PIPE, 1/2 HEX, STEEL	5
180	ELBOW, STREET - 1/8" NPT - BRASS	2
181	HOSE, ID, 1/4	1
195	LIFTING LUG	2
225	SCREW, CAP, HEX HEAD, 1/4-20 NYLOK	4
234	TAG, OIL LEVEL	2
238	SLINGER, SEAL	4
241	SCREW, HH CAP 10-32 X .63 STEEL NYLOK	12
242	FRAME, SIGHT GAUGE	2
243	WINDOW, SIGHT GLASS GAUGE	2
244	GASKET, WINDOW	2
245	GASKET, FRAME	2
274	HOSE, ID, 1/4	1
372	PLUG, STRAIGHT THREAD, 7/8, STEEL	2
500	THERMOSWITCH **35 FT-LB TORQUE**	1

NOTE:

- QUANTITIES SHOWN ARE MAXIMUM VALUES. QUANTITIES MAY VARY BETWEEN BLOWER.

Parts List for Model 850 to 2700 Series – C-Flange

ITEM NO.	PART DESCRIPTION	QTY
1	ROTOR	2
3	HOUSING	1
4	ENDPLT (see TB51,53)	2
6	C-FLANGE COVER DE	1
7	COVER F.E.	1
8	GEAR ASSEMBLY	1
9	BEARING, BALL, 2 ROW	2
10	BEARING, ROLL CYLINDER	2
13	SEAL, LIP	1
14	BEARING RETAINER	2
21	SLINGER, OIL, WELDED	1
22	PIN, DOWEL, 5/8 X 1 1/4	6
23	KEY, 5/16 SQUARE X 1 3/4	1
24	KEY, GEAR TIMING	2
25	WASHER, ROTOR SHAFT	1
26	SCREW, CAP, HEX HEAD, 1/2 x 4-1/4	28
29	SCREW, CAP, SOCKET HEAD, CS 1/2 X 1	1
30	SCREW, CAP, SOCKET HEAD, 5/16-18 NYLOK	8
31	PLUG, MAGNETIC, 1/2 SQUARE HEAD	2
35	LOCKNUT, GEAR	2
36	LOCKWASHER, GEAR	2
38	PORT	1
40	SCREW, CAP, HEX HEAD, 1/2 X 1-1/4	28
42	NAMEPLATE	1
45	SHAFT, DRIVE	1
48	PORT	1
51	SEAL, LAB	4
54	SEAL, MECH	4
57	BEARING SPACER	1
65	PLATE, LOCK - DRIVE SHAFT	2
66	SCREW, CAP, HEX HEAD 1/2 X 1-3/4	4
68	PIN, ROLL, 1/4 X 1	1
69	SCREW, CAP, SOCKET HEAD, CS 1/2X1-3/4	1
76	SEAL,MECH	1
85	PLUG, PIPE, 1/4 HEX, STEEL	6

ITEM NO.	PART DESCRIPTION	QTY
94	COOLING COILS, COPPER	2
95	O-RING, VITON A	4
96	O-RING, VITON A	4
97	BUSH, MANIFOLD, BRASS	4
123	BEARING SPACER	2
166	CONNECTOR, HOSE, 1/4 X 1/8 MPT - BRASS	2
174	PLUG, PIPE, 1/2 HEX, STEEL	3
180	ELBOW, STREET - 1/8" NPT - BRASS	2
181	HOSE, ID, 1/4	26
195	LIFTING LUG	2
234	TAG, OIL LEVEL	2
241	SCREW, HH CAP 10-32 X .63 STEEL NYLOK	24
242	FRAME, SIGHT GAUGE	4
243	WINDOW, SIGHT GLASS GAUGE	4
244	GASKET, WINDOW	4
245	GASKET, FRAME	4
303	C-FLANGE COVER	2
309	SCREW, CAP, SOCKET HEAD, 1/4 X.500 LONG	8
500	THERMOSWITCH **35 FT-LB TORQUE**	1

NOTE:


- QUANTITIES SHOWN ARE MAXIMUM VALUES. QUANTITIES MAY VARY BETWEEN BLOWER.

PARTS KITS ARE AVAILABLE. CONSULT AUTHORIZED REPRESENTATIVE FOR PART NUMBERS.


ASSEMBLY DRAWINGS

Models 150 to 400 – Cutaway View

Left Side Double Envelope – Right Side Slinger Seal

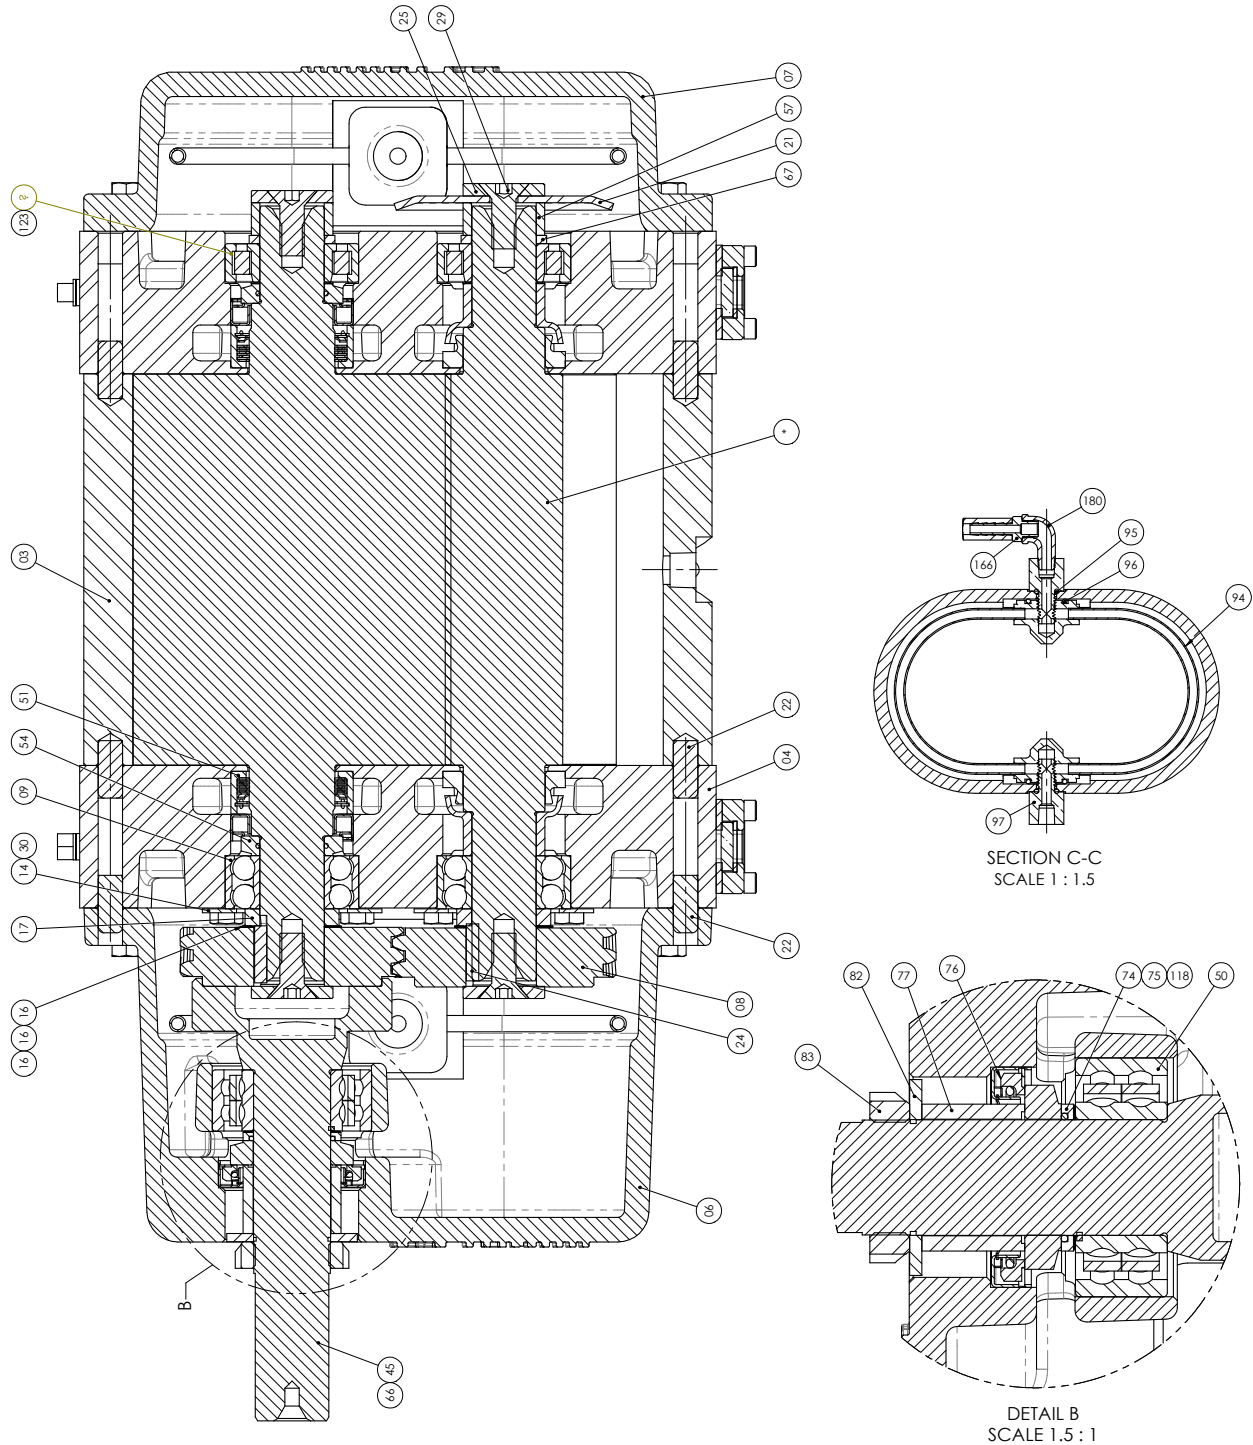



Models 150 to 400 – Dimensions

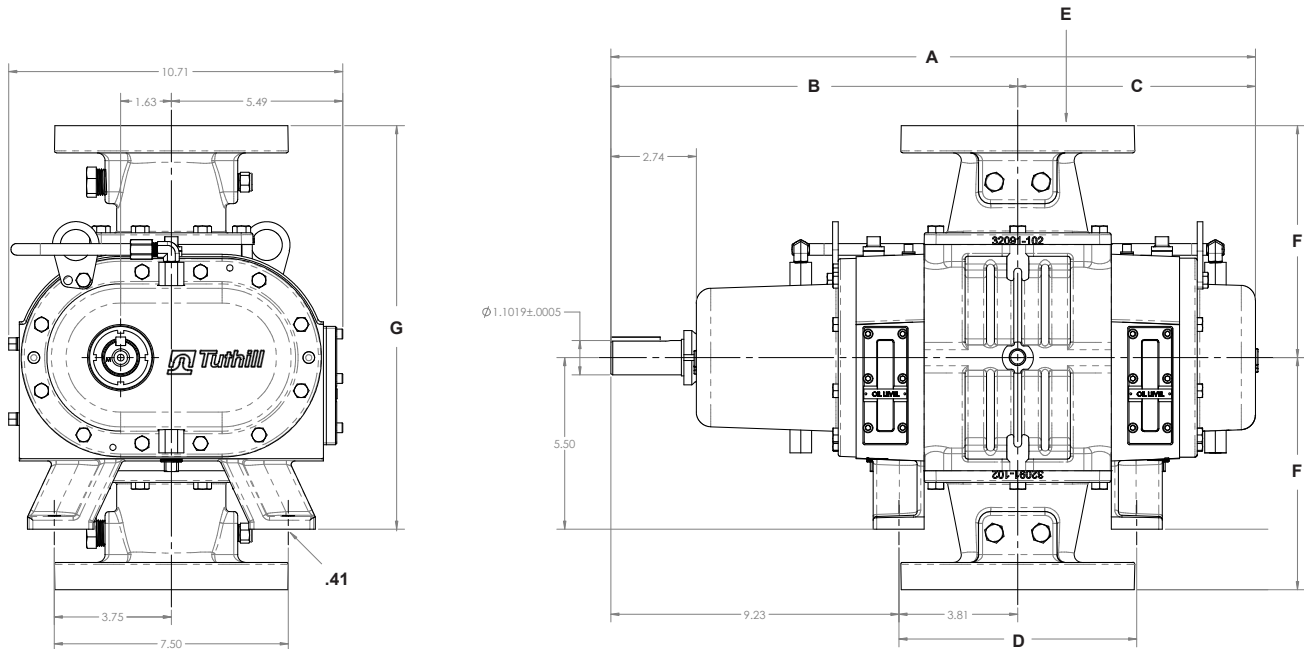


150 TO 400 DIMENSIONS							
MODEL	A	B	C	D	E	F	G
150	18.66 in. (474 mm)	12.04 in. (306 mm)	6.62 in. (168 mm)	5.62 in. (143 mm)	2" FLG 50 DN	5.82 in. (148 mm)	12.13 in. (308 mm)
240	20.66 in. (525 mm)	13.04 in. (331 mm)	7.62 in. (193 mm)	7.62 in. (193 mm)	3" FLG 80 DN	7.44 in. (189 mm)	12.94 in. (329 mm)
400	24.66 in. (626 mm)	15.04 in. (382 mm)	9.62 in. (244 mm)	11.62 in. (295 mm)	4"FLG 100 DN	7.44 in. (189 mm)	12.94 in. (329 mm)

Models 150 to 400 – C-flange – Cutaway View

Left Side Double Envelope – Right Side Slinger Seal

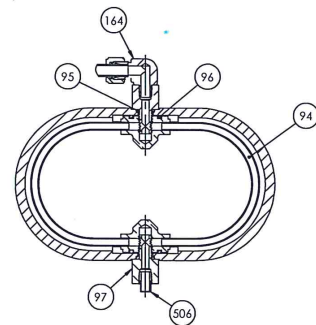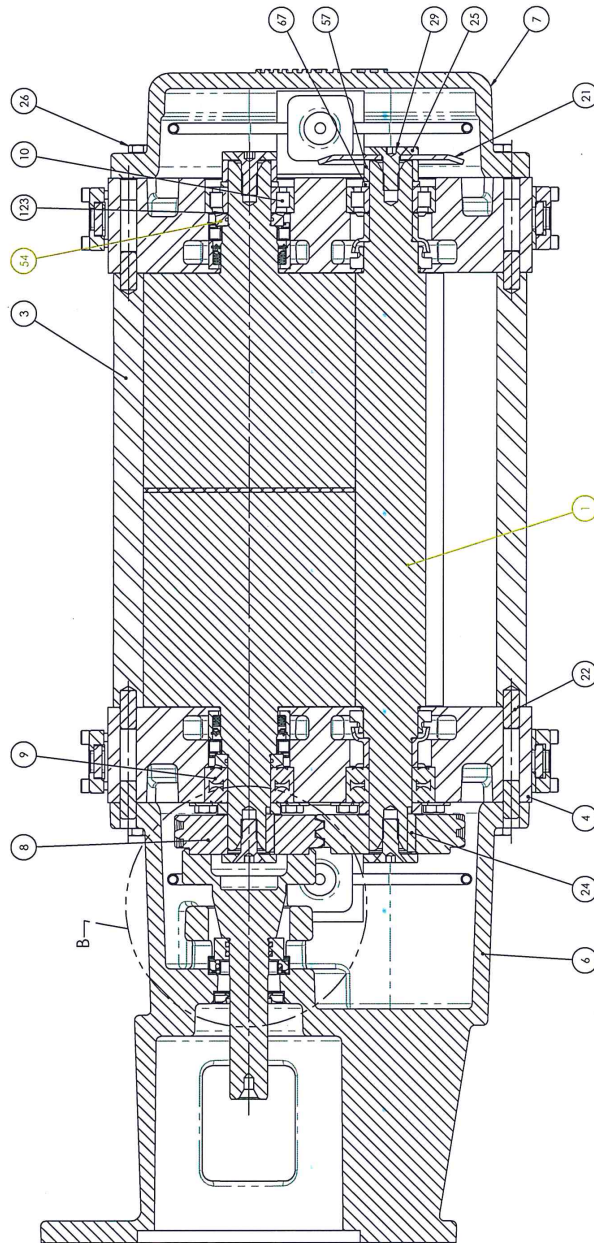


SECTION C-C
SCALE 1 : 2

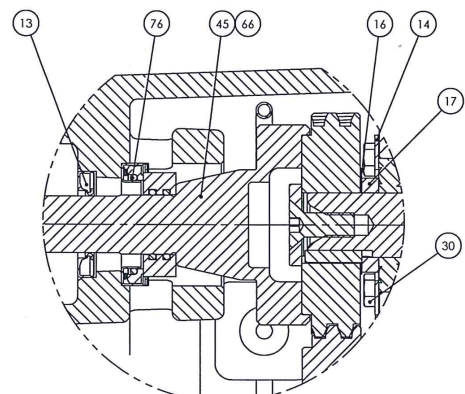

DETAIL B
SCALE 1 : 1



Models 150 to 400 – C-flange – Dimensions

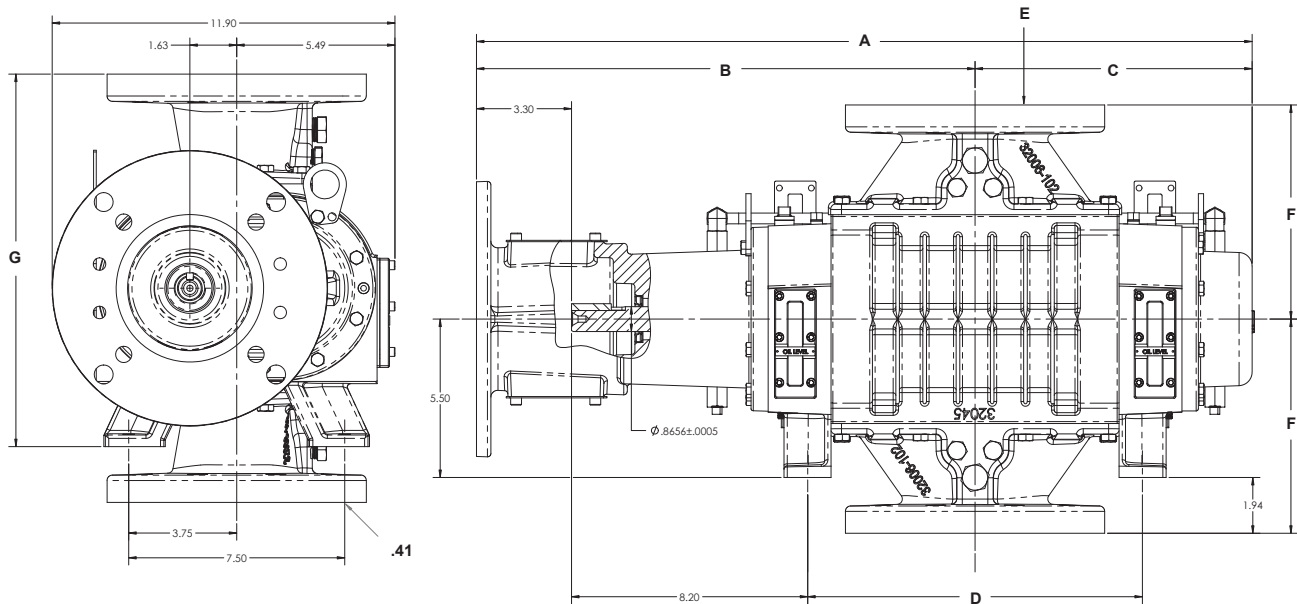


150 TO 400 DIMENSIONS							
MODEL	A	B	C	D	E	F	G
150	20.93 in. (532 mm)	14.31 in. (363 mm)	6.62 in. (168 mm)	6.62 in. (168 mm)	2" FLG 50 DN	5.82 in. (148 mm)	12.13 in. (308 mm)
240	22.93 in. (582 mm)	15.31 in. (389 mm)	7.62 in. (193 mm)	7.62 in. (193 mm)	3" FLG 80 DN	7.44 in. (189 mm)	12.94 in. (329 mm)
400	26.93 in. (684 mm)	17.31 in. (440 mm)	9.62 in. (244 mm)	11.62 in. (295 mm)	4"FLG 100 DN	7.44 in. (189 mm)	12.94 in. (329 mm)

Models 540 to 720 – Cutaway View

Left Side Double Envelope – Right Side Slinger Seal

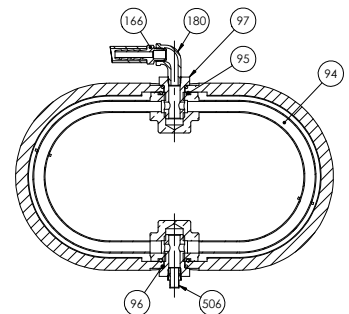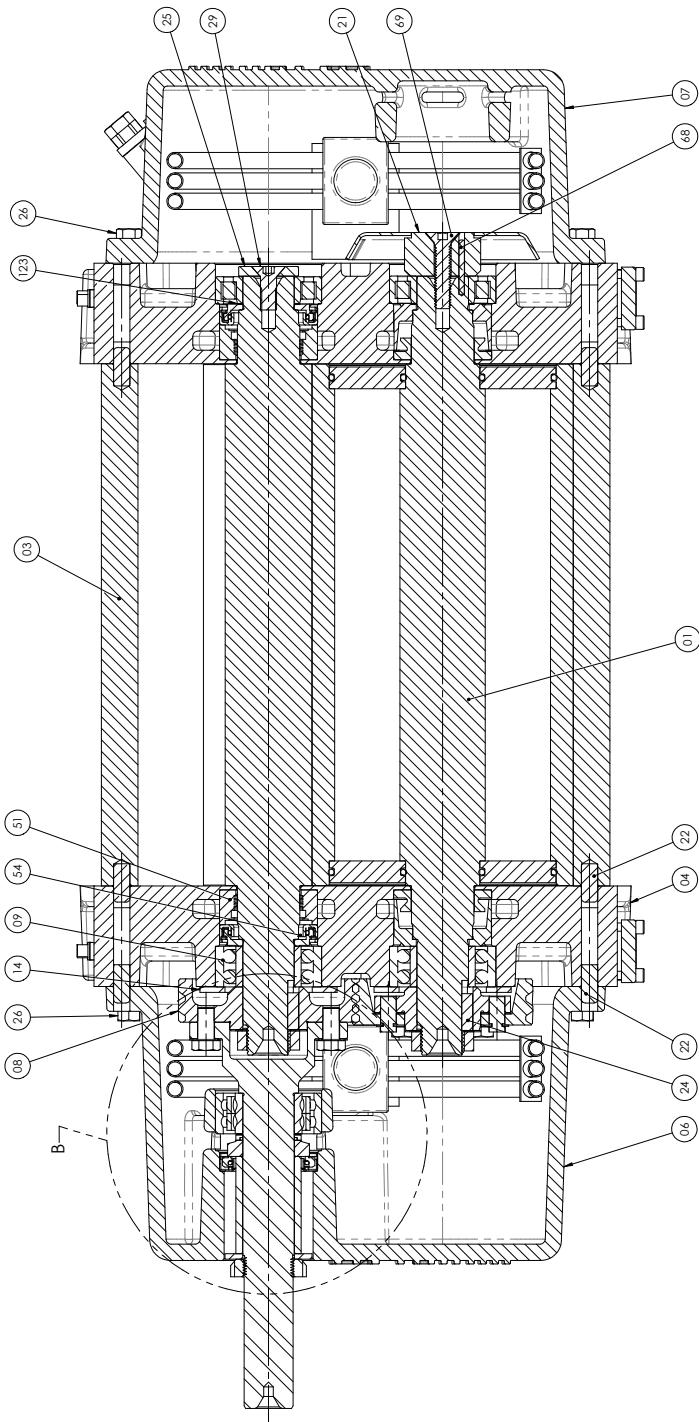


SECTION C-C
SCALE 1 : 2

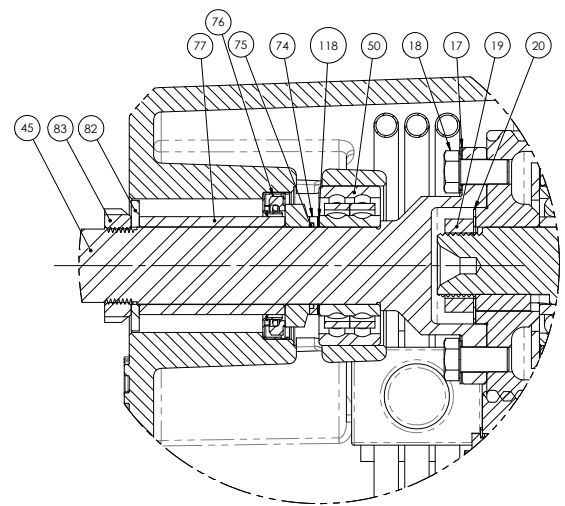

DETAIL B
SCALE 1 : 1




Models 540 to 720 – Dimensions

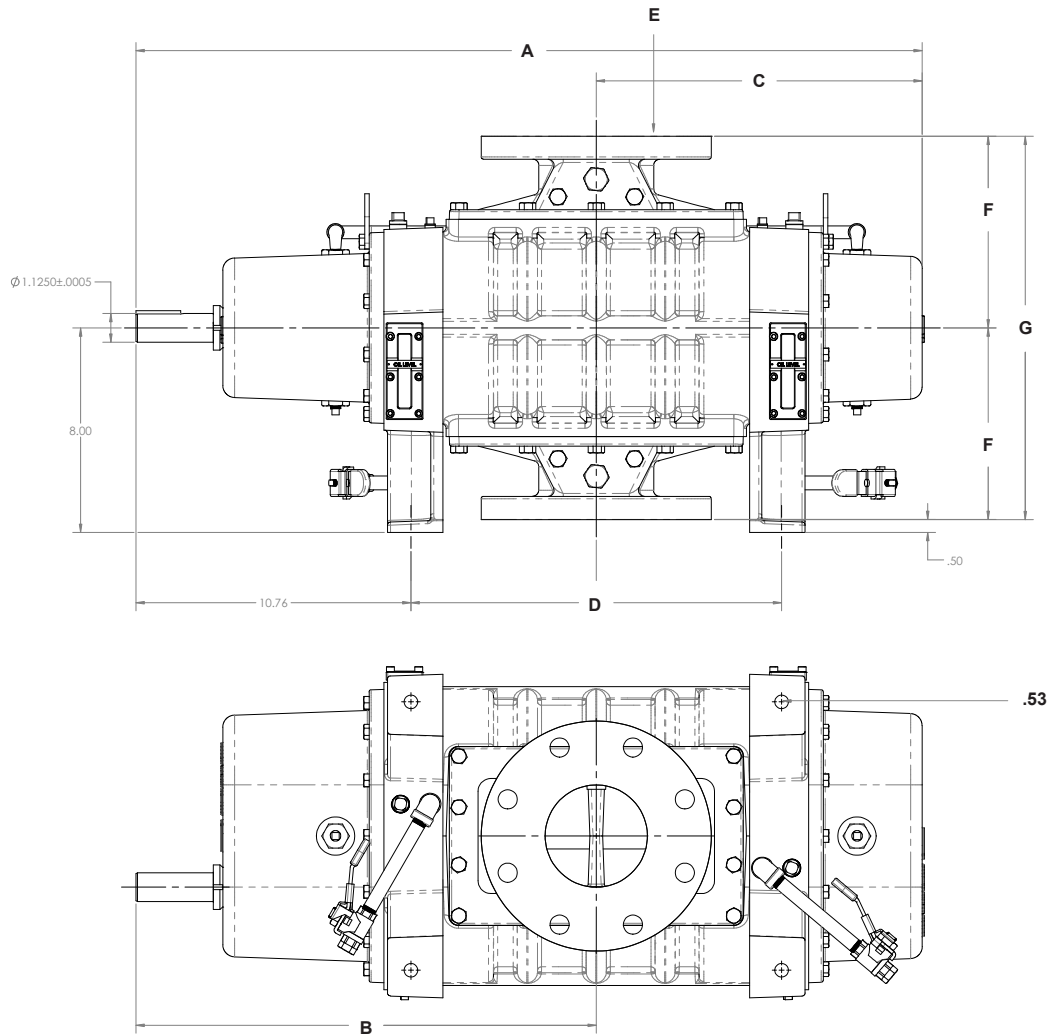


540 TO 720 DIMENSIONS							
MODEL	A	B	C	D	E	F	G
540	27.76 in. (705 mm)	16.51 in. (419 mm)	11.25 in. (286 mm)	11.50 in. (292 mm)	4"FLG 100 DN	7.50 in. (191 mm)	15.50 in. (394 mm)
720	30.76 in. (781 mm)	18.01 in. (457 mm)	12.75 in. (324 mm)	14.50 in. (368 mm)	4"FLG 100 DN	7.50 in. (191 mm)	15.50 in. (394 mm)

Models 540 to 720 – C-flange – Cutaway View

Left Side Double Envelope – Right Side Slinger Seal

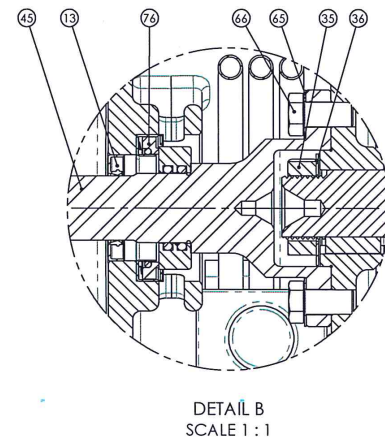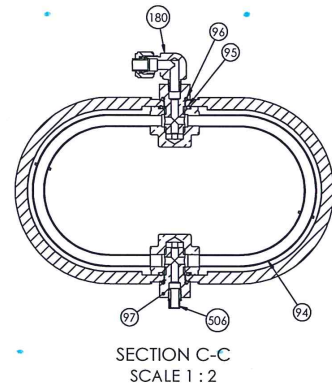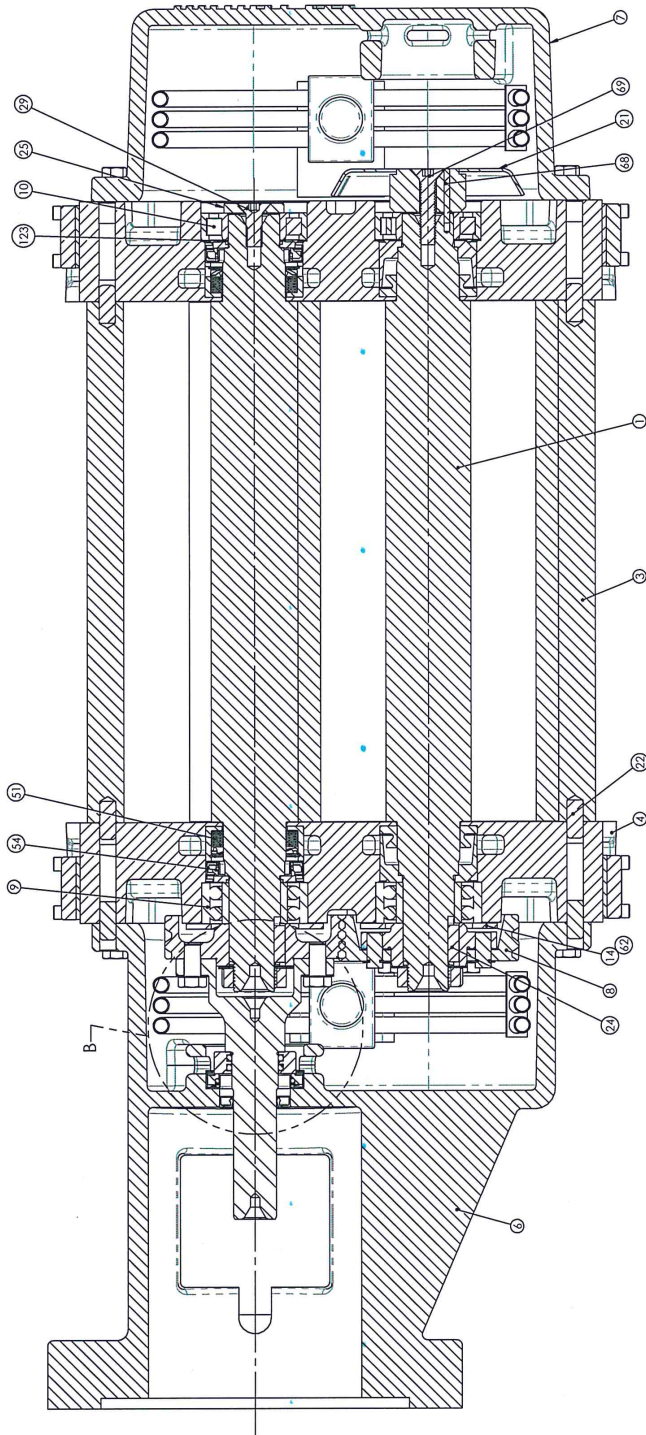


Models 540 to 720 – C-flange – Dimensions

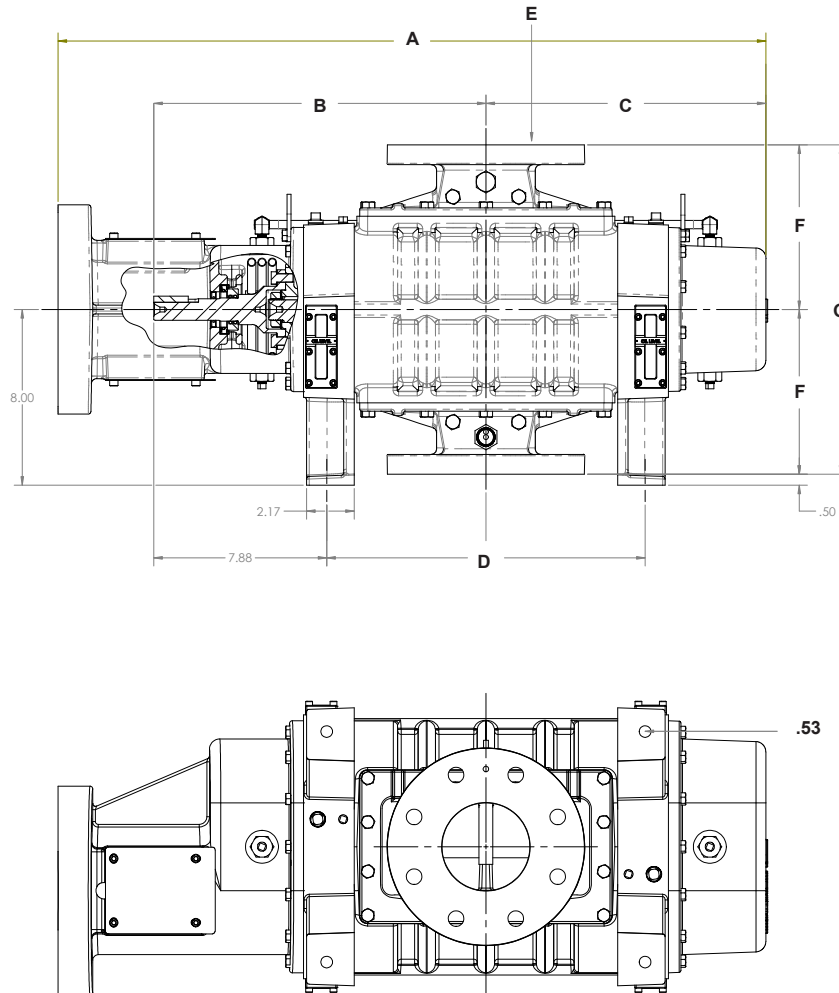


540 TO 720 DIMENSIONS							
MODEL	A	B	C	D	E	F	G
540	29.24 in. (743 mm)	13.63 in. (346 mm)	11.25 in. (286 mm)	11.50 in. (292 mm)	4"FLG 100 DN	7.50 in. (191 mm)	15.50 in. (394 mm)
720	32.24 in. (819 mm)	15.13 in. (384 mm)	12.75 in. (324 mm)	14.50 in. (368 mm)	4"FLG 100 DN	7.50 in. (191 mm)	15.50 in. (394 mm)

Models 850 to 2700 – Cutaway View

Left Side Double Envelope – Right Side Slinger Seal

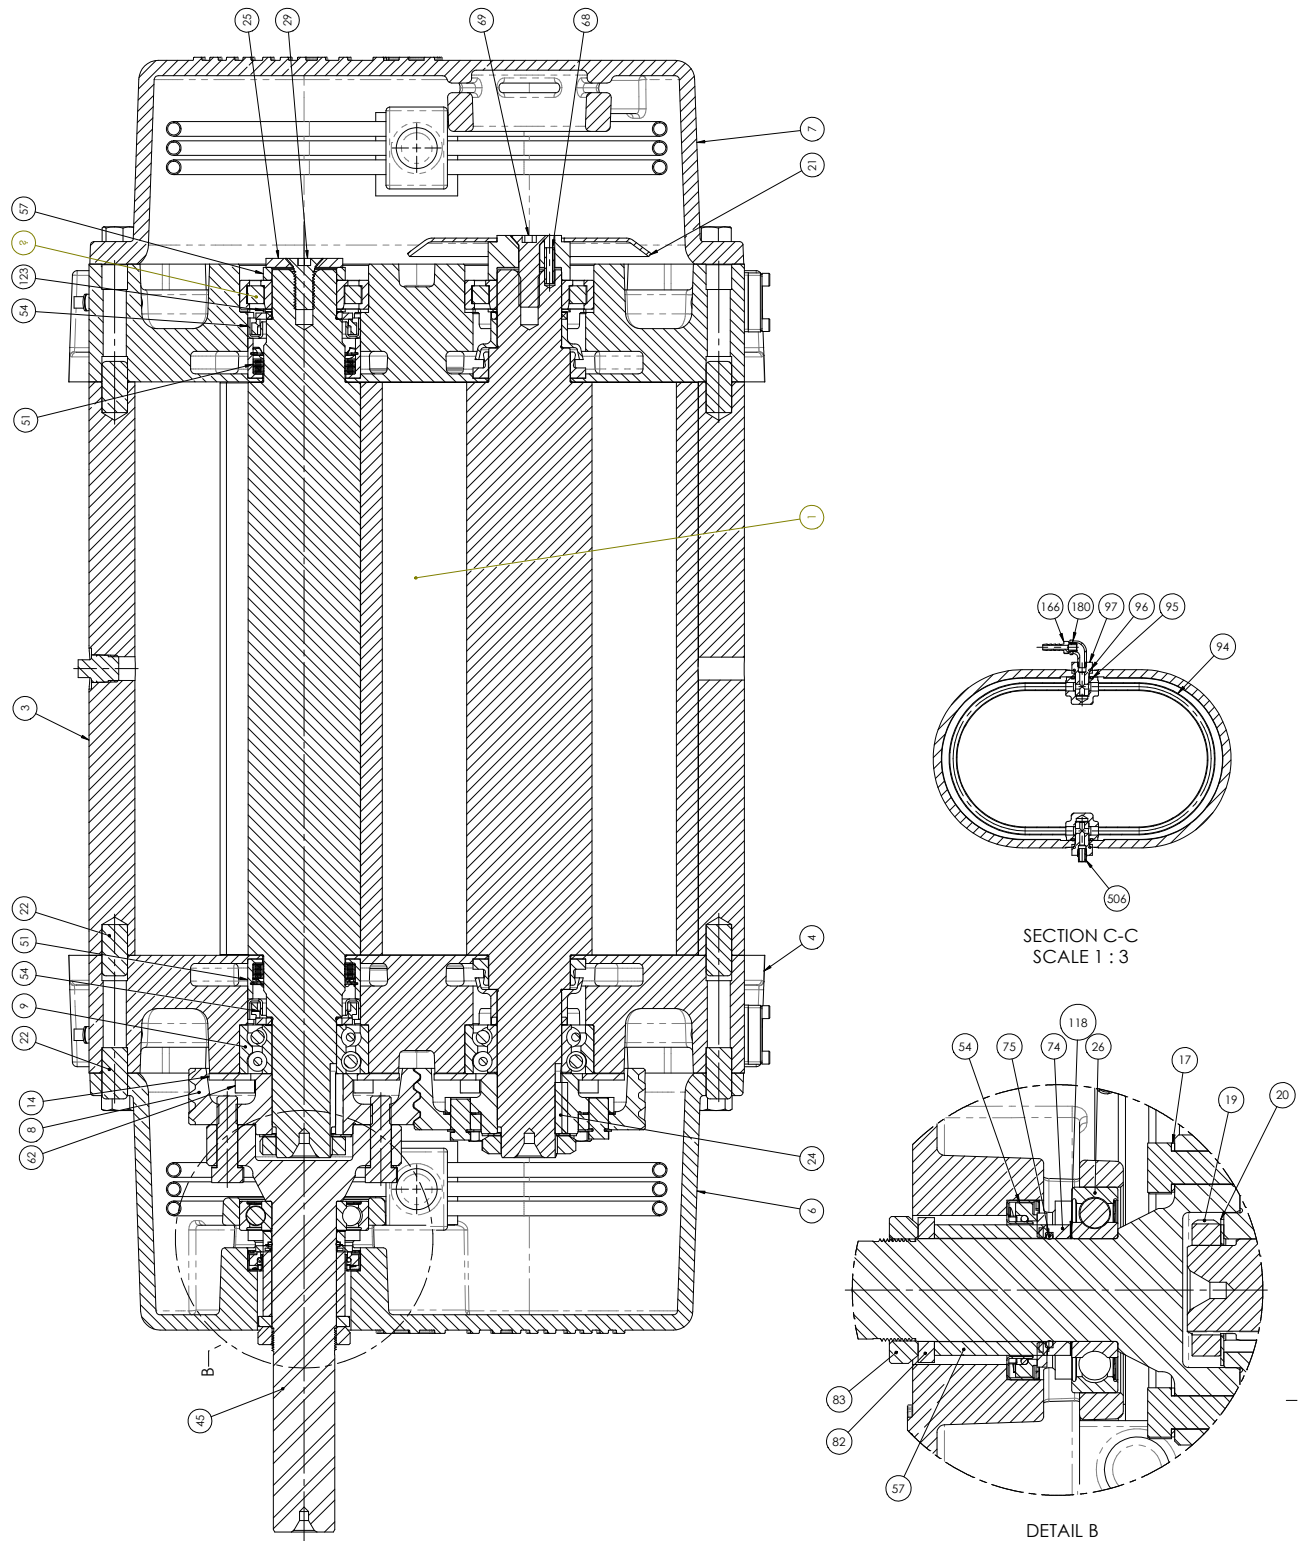


Models 850 to 2700 – Dimensions

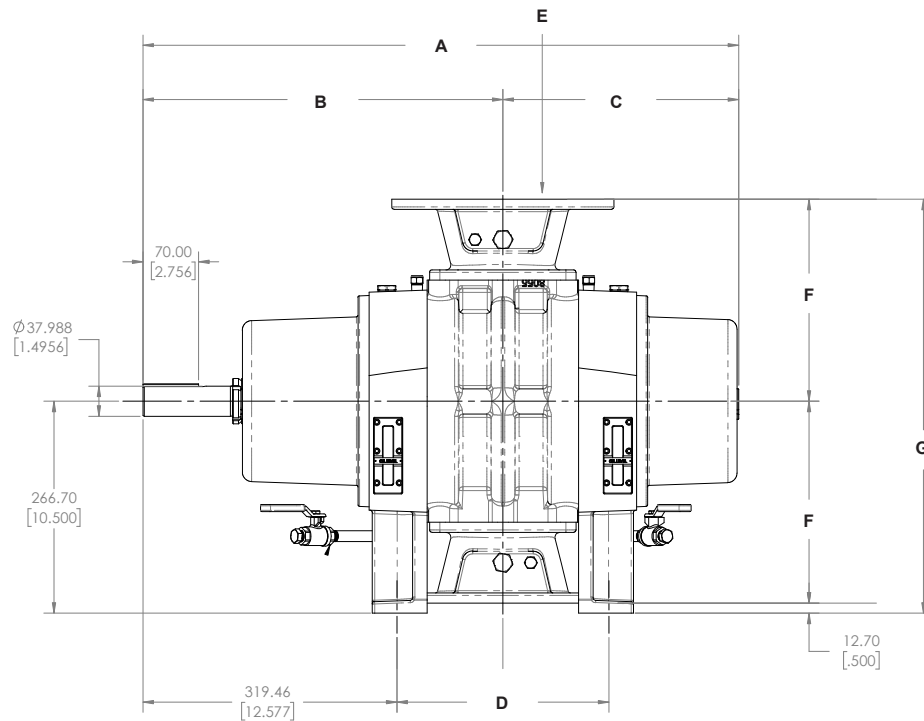


850 TO 2700 DIMENSIONS							
MODEL	A	B	C	D	E	F	G
850	29.51 in. (750 mm)	17.83 in. (453 mm)	11.69 in. (297 mm)	10.50 in. (267 mm)	6"FLG 150 DN	10.00 in. (254 mm)	20.50 in. (521 mm)
1200	33.01 in. (838 mm)	19.58 in. (497 mm)	13.69 in. (348 mm)	14.00 in. (368 mm)	6"FLG 150 DN	10.00 in. (254 mm)	20.50 in. (521 mm)
1600	36.01 in. (915 mm)	21.08 in. (535 mm)	14.85 in. (377 mm)	17.00 in. (445 mm)	6"FLG 150 DN	10.00 in. (254 mm)	20.50 in. (521 mm)
2000	40.01 in. (1019 mm)	23.08 in. (586 mm)	16.85 in. (428 mm)	21.50 in. (546 mm)	8"FLG 200 DN	10.00 in. (254 mm)	20.50 in. (521 mm)
2700	46.01 in. (1169 mm)	26.08 in. (662 mm)	19.85 in. (504 mm)	27.50 in. (699 mm)	10"FLG 250 DN	10.00 in. (254 mm)	20.50 in. (521 mm)

Models 850 to 2700 – C-flange – Cutaway View

Left Side Double Envelope – Right Side Slinger Seal

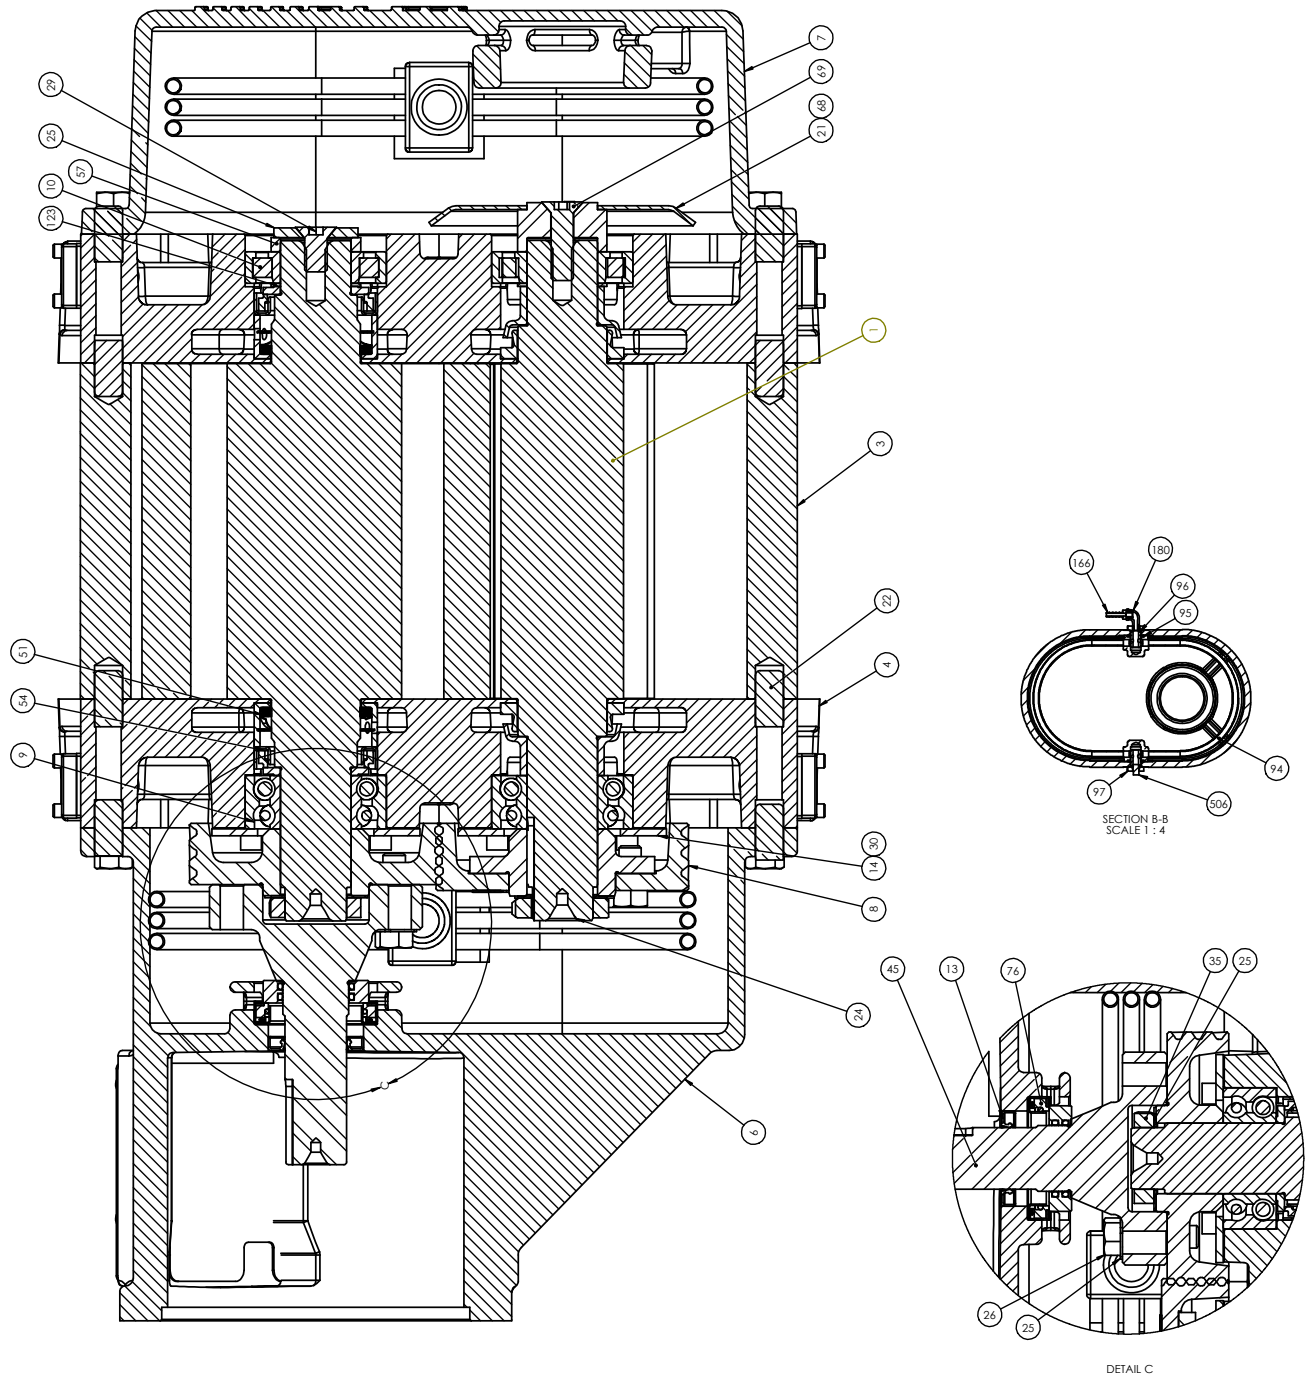

Models 850 to 2700 – C-flange – Dimensions

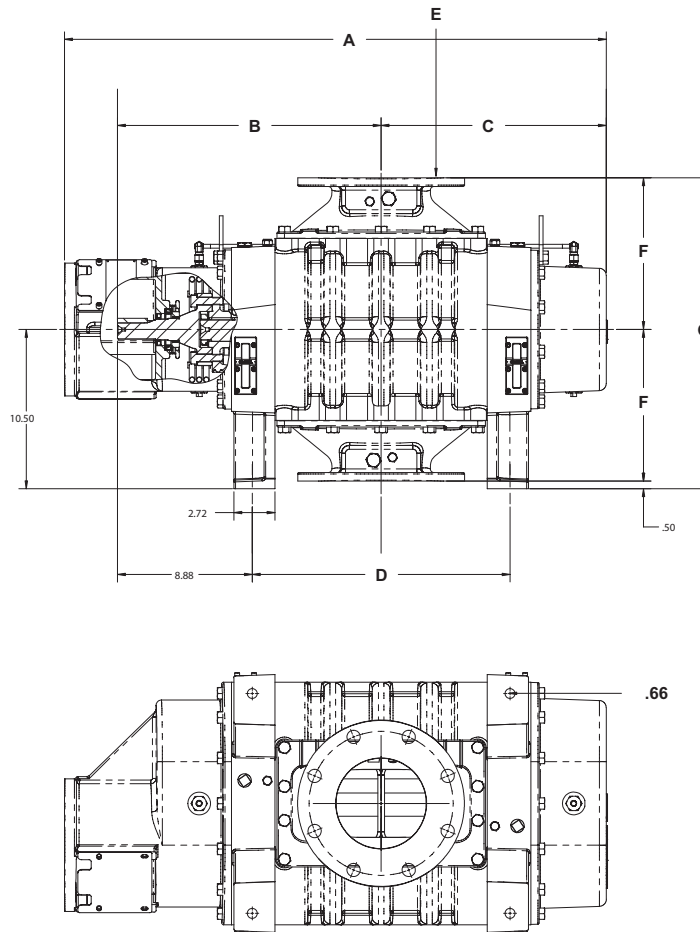

850 TO 2700 DIMENSIONS							
MODEL	A	B	C	D	E	F	G
850	29.23 in. (742 mm)	14.14 in. (359 mm)	11.69 in. (297 mm)	10.50 in. (267 mm)	6"FLG 150 DN	10.00 in. (254 mm)	20.50 in. (521 mm)
1200	32.73 in. (831 mm)	15.89 in. (404 mm)	13.69 in. (348 mm)	14.00 in. (368 mm)	6"FLG 150 DN	10.00 in. (254 mm)	20.50 in. (521 mm)
1600	35.73 in. (908 mm)	17.39 in. (535 mm)	14.85 in. (377 mm)	17.00 in. (445 mm)	6"FLG 150 DN	10.00 in. (254 mm)	20.50 in. (521 mm)
2000	39.73 in. (1009 mm)	21.39 in. (543 mm)	16.85 in. (428 mm)	21.50 in. (546 mm)	8"FLG 200 DN	10.00 in. (254 mm)	20.50 in. (521 mm)
2700	45.73 in. (1143 mm)	27.39 in. (696 mm)	19.85 in. (504 mm)	27.50 in. (699 mm)	10"FLG 250 DN	10.00 in. (254 mm)	20.50 in. (521 mm)

WARRANTY – VACUUM PRODUCTS

Subject to the terms and conditions hereinafter set forth and set forth in General Terms of Sale, Kinney (the Seller) warrants products and parts of its manufacture, when shipped, and its work (including installation and start-up) when performed, will be of good quality and will be free from defects in material and workmanship. This warranty applies only to Seller's equipment, under use and service in accordance with seller's written instructions, recommendations and ratings for installation, operating, maintenance and service of products, for a period as stated in the table below. Because of varying conditions of installation and operation, all guarantees of performance are subject to plus or minus 5% variation. (Non-standard materials are subject to a plus or minus 10% variation)

PRODUCT TYPE	TYPE OF APPLICATION	
	ATMOSPHERIC AIR OR PROCESS AIR WITHOUT LIQUIDS PRESENT	PROCESS GASES OTHER THAN AIR, OR ANY LIQUID INJECTED APPLICATION
New (Qx™ models only)	30 months from date of shipment, or 24 months after initial startup date, whichever occurs first.	Consult Factory
New (all other models)	24 months from date of shipment, or 18 months after initial startup date, whichever occurs first	18 months from date of shipment, or 12 months after initial startup date, whichever occurs first
Repair	12 months from date of shipment, or remaining warranty period, whichever is greater	12 months from date of shipment, or remaining warranty period, whichever is greater

THIS WARRANTY EXTENDS ONLY TO BUYER AND/OR ORIGINAL END USER, AND IN NO EVENT SHALL THE SELLER BE LIABLE FOR PROPERTY DAMAGE SUSTAINED BY A PERSON DESIGNATED BY THE LAW OF ANY JURISDICTION AS A THIRD PARTY BENEFICIARY OF THIS WARRANTY OR ANY OTHER WARRANTY HELD TO SURVIVE SELLER'S DISCLAIMER.

All accessories furnished by Seller but manufactured by others bear only that manufacturer's standard warranty.

All claims for defective products, parts, or work under this warranty must be made in writing immediately upon discovery and, in any event within one (1) year from date of shipment of the applicable item and all claims for defective work must be made in writing immediately upon discovery and in any event within one (1) year from date of completion thereof by Seller. Unless done with prior written consent of Seller, any repairs, alterations or disassembly of Seller's equipment shall void warranty. Installation and transportation costs are not included and defective items must be held for Seller's inspection and returned to Seller's Ex-works point upon request.

THERE ARE NO WARRANTIES, EXPRESSED, IMPLIED OR STATUTORY WHICH EXTEND BEYOND THE DESCRIPTION ON THE FACE HEREOF, INCLUDING WITHOUT LIMITATION, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS OF PURPOSE.

After Buyer's submission of a claim as provided above and its approval, Seller shall at its option either repair or replace its product, part, or work at the original Ex-works point of shipment, or refund an equitable portion of the purchase price.

The products and parts sold hereunder are not warranted for operation with erosive or corrosive material or those which may lead to build up of material within the product supplied, nor those which are incompatible with the materials of construction. The Buyer shall have no claim whatsoever and no product or part shall be deemed to be defective by reason of failure to resist erosive or corrosive action nor for problems resulting from build-up of material within the unit nor for problems due to incompatibility with the materials of construction.

Any improper use, operation beyond capacity, substitution of parts not approved by Seller, or any alteration or repair by others in such manner as in Seller's judgment affects the product materially and adversely shall void this warranty.

No employee or representative of Seller other than an Officer of the Company is authorized to change this warranty in any way or grant any other warranty. Any such change by an Officer of the Company must be in writing.

The foregoing is Seller's only obligation and Buyer's only remedy for breach of warranty, and except for gross negligence, willful misconduct and remedies permitted under the General Terms of Sale in the sections on CONTRACT PERFORMANCE, INSPECTION AND ACCEPTANCE and the PATENTS Clause hereof, the foregoing is BUYER'S ONLY REMEDY HEREUNDER BY WAY OF BREACH OF CONTRACT, TORT OR OTHERWISE, WITHOUT REGARD TO WHETHER ANY DEFECT WAS DISCOVERED OR LATENT AT THE TIME OF DELIVERY OF THE PRODUCT OR WORK. In no event shall Buyer be entitled to incidental or consequential damages. Any action for breach of this agreement must commence within one (1) year after the cause of action has occurred.

OPERATING DATA FORM / PRODUCT REGISTRATION

It is to the user's advantage to have the requested data filled in below and available in the event a problem should develop in the blower or the system. This information is also helpful when ordering spare parts.

Model No.	_____	V-Belt Size	_____	Length	_____
Serial No.	_____	Type of Lubrication	_____		
Startup Date	_____	_____			
Pump RPM	_____	Operating Vacuum	_____		
Pump Sheave Diameter	_____	Any other Special Accessories Supplied or in use:			
Motor Sheave Diameter	_____	_____			
Motor RPM	_____	HP	_____	_____	

NOTES:

IMPORTANT

All vacuum boosters and vacuum pumps manufactured by Kinney are date coded at time of shipment. In order to assure you of the full benefits of the product warranty, please complete, tear out and return the product registration card. You may also register your product online at www.kinneyvacuum.com or contact Customer Service.

KINNEY®

**For Service & Repair, Technical
Support, or Product Sales contact:**

David Blackwell
Channel Partner Representative

1361 Mountain View Circle
Azusa, California 91702

T :: 626.385.3516
C :: 626.208.6940
E :: david@ptbsales.com
www.ptbsales.com



Manual 2003 Rev D p/n 002003 0000

04/21